




# EHK-DL INSTALLATION INSTRUCTIONS

## E SERIES DUMP PUMP DIRECT MOUNT

**EHK-DL** L-Rotation Pumps (CCW)

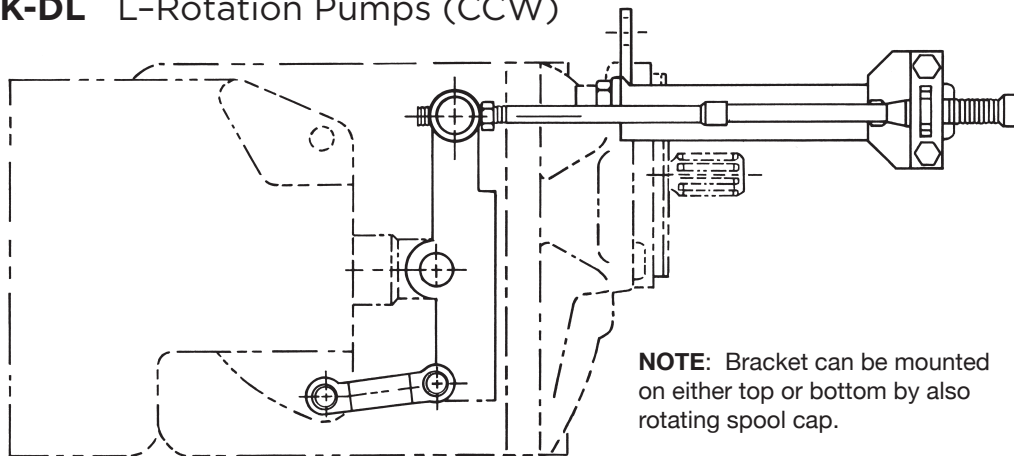

**NOTE:** Bracket can be mounted on either top or bottom by also rotating spool cap.

**MUNCIE** 85 Series

1/4" CABLE CONTROLS



Use 1-1/4"-20 Thd. x 5/8" fastener to mount cable pad to base. Mount strap with 2-1/4"-20 x 1" fasteners.

Two holes closest to the pump used for mounting 1/4"-28 Thd. cables.



A Member of the Interpump Group  
IN87-08 (Rev. 08-23)

201 East Jackson Street • Muncie, Indiana 47305  
800-367-7867 • Fax 765-284-6991  
info@munciepower.com • www.munciepower.com  
Specifications are subject to change without notice.  
Visit [www.munciepower.com](http://www.munciepower.com) for warranties and literature.  
All rights reserved. © Muncie Power Products, Inc. (2010)