

# FR66F1209D3\*X PT0 Installation Kit Contents Kit # 43TK5209

(1) Hose Assembly - 45T42791







(1) Grommet - 37T35674







(1) Metric Straight x ORSF - 43T42793



(1) Face Plate - 36T36271





(3) 12-Point Capscrews - 19T42075



(2) Shoulder Studs - 20T37914





(1) Pressure Switch - 30T41642




(1) Elbow Fitting - 43T42792

(1) Dash Bracket Bolt Kit – 36MK1007




(1) Rocker Switch - 30T35687

# WIRE HARNESS 34T41671 FOR USE IN EITHER STATIC

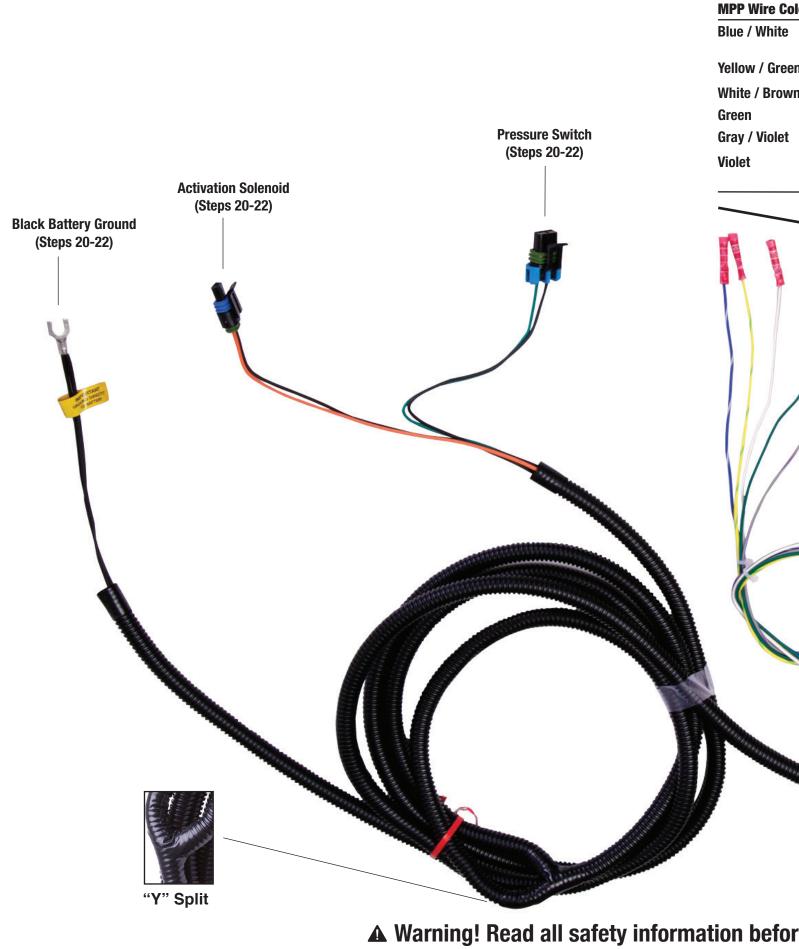

Additionally, you must have completed the installation

# DNARY <u>or</u> mobile mode. (F250 – F550 diesel only)

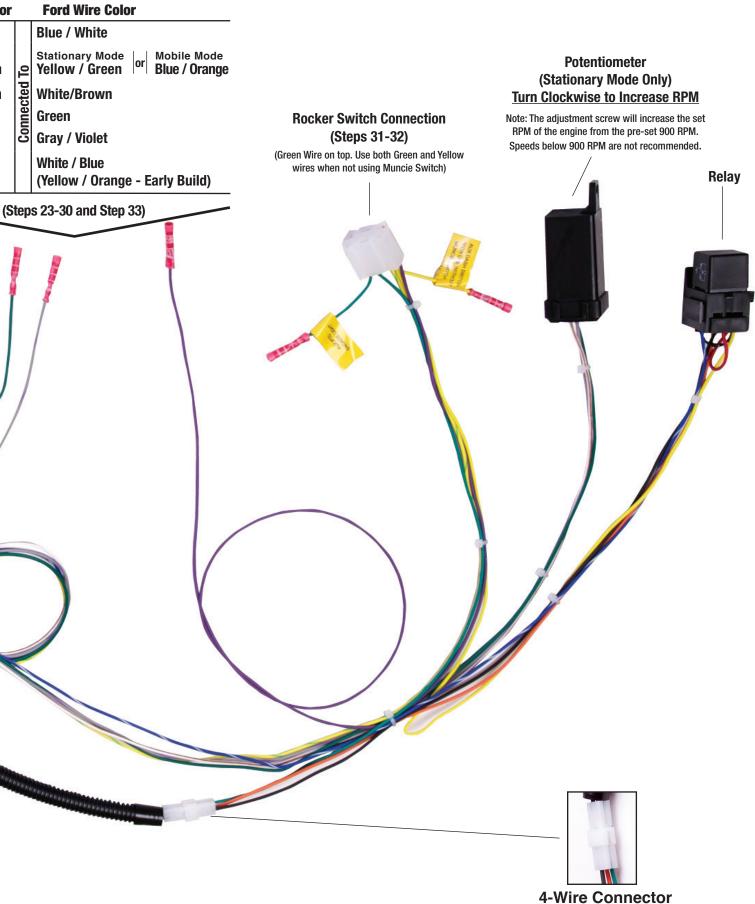

### e installing the wire harness for FR66 PTO.

n of the FR66 PTO prior to installing the wire harness.

**19.** (From step 19, page 10 of Installation / Owners Manual)

20. Separate the wire harness at the 4-Wire connector. The engine compartment portion of the wire harness has (3) connections: the battery ground, activation solenoid, and pressure switch.

21. Connect the wire harness to the pressure switch and solenoid (both are on the FR66 PTO). Also, connect the ground lead of the harness to the battery ground terminal.

22. Now route the 4-Wire connector of the engine compartment half of the wire harness to feed into the cab. The connector is designed to fit through the 5/8" grommet (37T35674). Be sure to tie the harness away from rotating components (driveshafts, belts, etc.).

23. Remove the access panel located below the steering wheel. (Figure 1)

24. Locate the 4-Wire connector that was fed through the passenger barrier and re-connect the in-cab half of

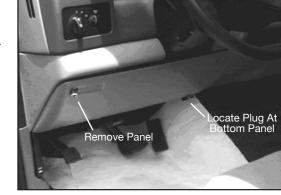


Figure 1

the harness to the engine compartment half.

25. In the cab near the parking brake pedal, you will find the Ford blunt cut wires for connection to the FR66 PTO wiring harness.


Easier access to the wires can be obtained once the access panel has been removed and by removing the screws holding the fuse box. (Figure 2)



26. Connect the Muncie Blue/ White wire to the Ford Blue / White wire; circuit PTO-RELAY.

Figure 2

27. For Stationary Operation, connect the Muncie Yellow / Green wire to the Ford Yellow / Green wire; circuit PTORS1. For Mobile Operation, connect the Muncie Yellow / Green wire to the Ford Blue / Orange wire (Blue / Gray early build); circuit PTORS2. (Connect the Muncie wire to only one of the Ford wires)

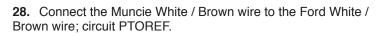

**29.** Connect the Muncie Green wire to the Ford Green wire: circuit PTO RPM.

30. Connect the Muncie Gray / Violet wire to the Ford Gray / Violet wire; circuit PTORTN.

**31.** Install the Muncie switch (30T35687) into the Muncie switch bracket (36MA1005) or the dash. (If using a Ford Auxiliary Switch, connect the Green Muncie wire lead to the Aux. Light and connect the Yellow wire lead to the Aux. Dash Switch.)

**32.** Route the wire harness to the bracket or switch location. Attach the switch connector block to the switch. (Note: the Green wire needs to be at the top of the switch.)

33. Connect the Muncie Violet wire to the Ford White / Blue (Yellow / Orange early build) 12V ignition switch power source. (Figure 3)

#### 34. With the Truck in park and the PTO switch in the "Off"

position, start the truck. Listen for a few seconds for any unnatural noises. Always stay clear of rotating components. (Note: Should an unnatural noise occur. SHUT OFF the engine and place the ignition keys in your pocket. Remove the FR66 PTO and examine both the FR66 PTO



Figure 3

and the transmission for any defects. Always keep the FR66 PTO and transmission run time to a minimum.)

35. Check transmission oil level and fill to proper level per instructions found in vehicle owner's manual. Adding a PTO will require additional transmission fluid. Run engine for 5 to 10 minutes to check for leaks. Always stay clear of rotating components.

36. SHUT OFF engine and place the ignition keys in your pocket. Inspect the cap screws to make sure they are properly tightened. Mounting bolts should be checked on a regular basis. Re-install the 4x4 drive shaft if removed in step 3 of the PTO installation process.

37. For help installing pumps or other equipment refer back to page 11 of Installation/Owners Manual.



Muncie Power Products, Inc. Member of the Interpump Hydraulics Group General Offices and Distribution Center • P.O. Box 548 • Muncie, IN 47308-0548 (765) 284-7721 • FAX (765) 284-6991 • E-mail info@munciepower.com Web site http://www.munciepower.com Drive Products, Exclusive Agents for Canada, ISO Certified by an Accredited Registrar

IN13-09 (Rev. 10-13) Printed in the U.S.A. © Muncie Power Products, Inc. 2013