

HF81718-13V



Installation Instructions

Purpose: This manifold is intended to relieve pressure within the plow angle lines. It allows easier connection between quick disconnect fittings.

Operation Instruction: Pull actuators to relieve pressure within the plow angle circuit

Installation Instructions:

1. Locate the T Port – Route back to tank – Plow Angle Disconnect Return
2. Locate the PAA Port – Route to the PAA port on the Main Hydraulic Manifold
3. Locate the PAB Port – Route to the PAB port on the Main Hydraulic Manifold
4. Locate the PAA1 Port – Route to the plow left cylinder
5. Locate the PAB1 Port – Route to the plow right cylinder

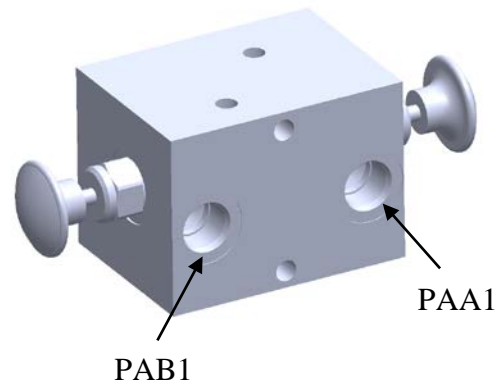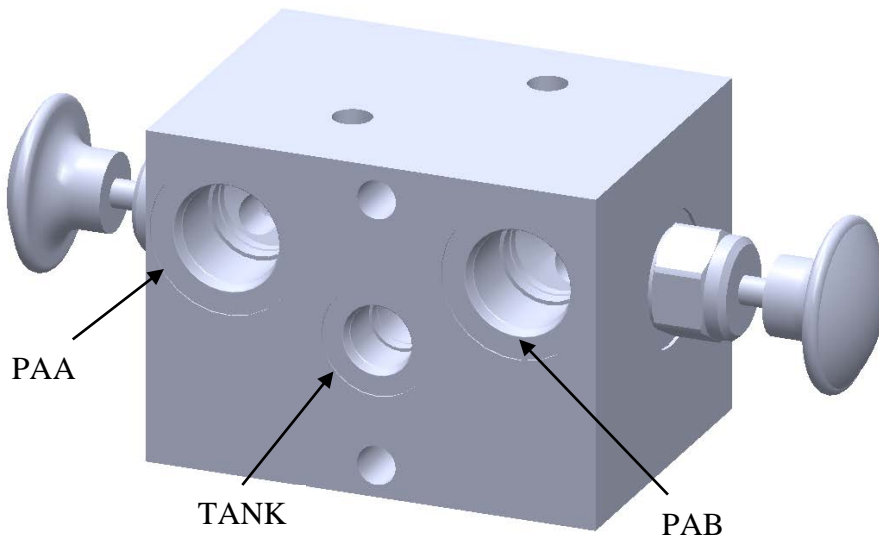

HF81718-13V

Plumbing Diagram

