

Omni Plus System

INDOT Wing & Scraper Plumbing Instructions

- 1) Ensure that both HF111921-16 (Scraper Manifold & Wing Manifold) & HF114077-17 (Primary Manifold) are plumbed in parallel.
- 2) Please refer to the drawing below for instructions to plumb the pressure, tank, and load sense lines.
- 3) Please refer to the drawing below for instructions to plumb the external relief valve to the WSB port on the Scraper Manifold (HF11921-16).

