


Advantage Plus Manual Overrides

Typically, to activate a function using the manual overrides several valves must be activated (see tables below for details). Find the desired hydraulic function to activate on the table, and manually override all valves listed in the corresponding row.

| SOLENOID SHIFT SEQUENCE | |
|------------------------------|------------|
| Spinner | TS3, SP3 |
| Auger | TS3, SP2 |
| Plow Raise | TS3, SP1 |
| Plow Lower | TS3, SP6 |
| Plow Left | TS3, EHPR2 |
| Plow Right | TS3, EHPR1 |
| Dump Raise | TS3, SP4 |
| Dump Lower | TS3, SP5 |
| Liquid (provision) | TS3, SP7 |
| CARTRIDGE VALVE DESIGNATIONS | |
| Main Relief | TS3 |
| Spinner | SP3 |
| Auger | SP2 |
| Plow Raise | SP1 |
| Plow Lower | SP6 |
| Plow Left | EHPR2 |
| Plow Right | EHPR1 |
| Dump Raise | SP4 |
| Dump Lower | SP5 |
| Liquid | SP7 |

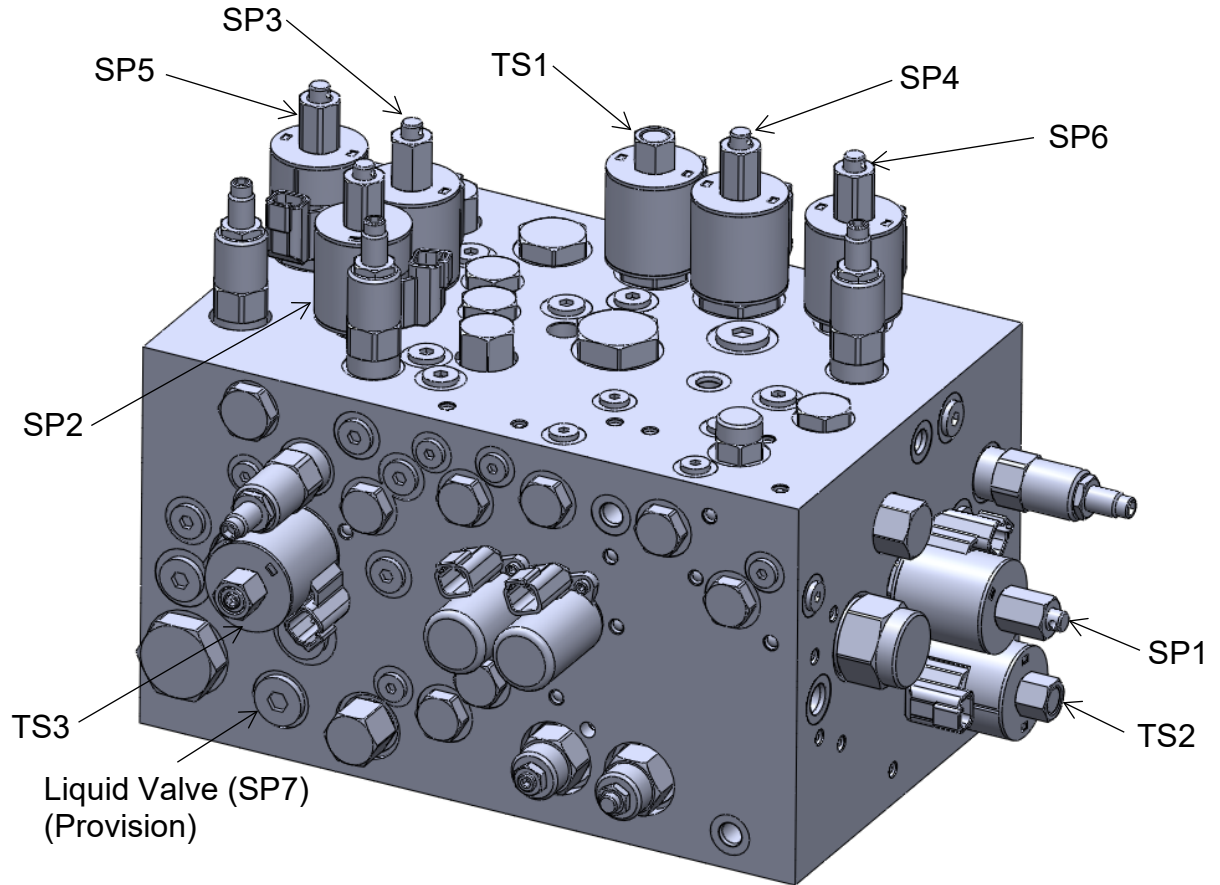

***Note: To Activate TS3- Main Relief use a 3/16" Allen wrench to turn the Manual Override Screw CW, to fully actuate TS3 turn the screw all the way. After functions have been actuated return screw back to starting position.**

****Note: Push Down and CCW on Red Manual Override until it locks in the Up position to Activate. To Deactivate push down and CW on the Red Manual Override until it locks in the Down position.**

***Warning - Reset all manual overrides to Normal Position when finished to prevent damaging the system.**