


PLUMBING DIAGRAM SNW16-072BENCH

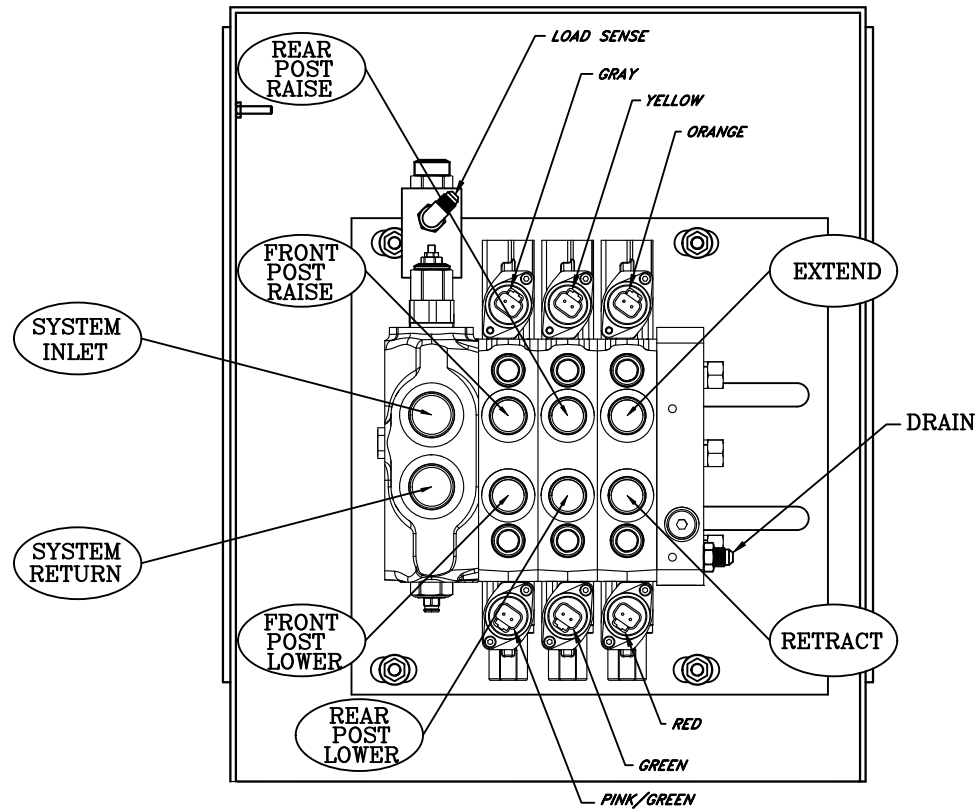

- | | | | | |
|-----|-----|-----|-----|-----|
| ○ A | ○ C | ○ E | ○ G | ○ I |
| ○ B | ○ D | ○ F | ○ H | ○ J |

DIRECTIONAL VALVE PASS THRU LOCATIONS

PORT FUNCTION	PORT SIZE
A = DRAIN	(-6 JIC)
B = LOAD SENSE	(-4 JIC)
C = RETRACT	(-8 JIC)
D = EXTEND	(-8 JIC)
E = REAR POST LOWER	(-8 JIC)
F = REAR POST RAISE	(-8 JIC)
G = FRONT POST LOWER	(-8 JIC)
H = FRONT POST RAISE	(-8 JIC)
I = SYSTEM RETURN	(-12 JIC)
J = SYSTEM INLET	(-12 JIC)

SLAVE 2 OUTPUTS
 Gray = Wing Front Post Up (B1)
 Pink/Green = Wing Front Post Down (B2)
 Yellow = Wing Rear Post Up (B3)
 Green = Wing Rear Post Down (B4)
 Red = Wing Retract (B5)
 Orange = Wing Extend (B6)

