

# GROUNDING BUSS PIN ASSIGNMENTS

PIN #	CONNECTOR 1	CONNECTOR 2
1	SLAVE HARNESS	RELAY
2	SLAVE HARNESS	FILTER BYPASS SWITCH
3	MASTER HARNESS	NOT USED
4	MASTER HARNESS	NOT USED
5	NOT USED	NOT USED
6	NOT USED	NOT USED
7	ANTI-ICE	NOT USED
8	ANTI-ICE	NOT USED
9	NOT USED	NOT USED
10	NOT USED	NOT USED
11	NOT USED	PUMP PRESSURE
12	NOT USED	CONTROL PANEL

