


## Advantage Plus Manual Overrides

Typically, to activate a function using the manual overrides several valves must be activated (see tables below for details). Find the desired hydraulic function to activate on the table, and manually override all valves listed in the corresponding row.

SOLENOID SHIFT SEQUENCE	
Spinner	TS3, SP3
Auger	TS3, SP2
Plow Raise	TS3, SP1
Plow Lower	TS3, SP6
Plow Left	TS3, EHPR2
Plow Right	TS3, EHPR1
Dump Raise	TS3, SP4
Dump Lower	TS3, SP5
Liquid (provision)	TS3, SP7
CARTRIDGE VALVE DESIGNATIONS	
Main Relief	TS3
Spinner	SP3
Auger	SP2
Plow Raise	SP1
Plow Lower	SP6
Plow Left	EHPR2
Plow Right	EHPR1
Dump Raise	SP4
Dump Lower	SP5
Liquid	SP7

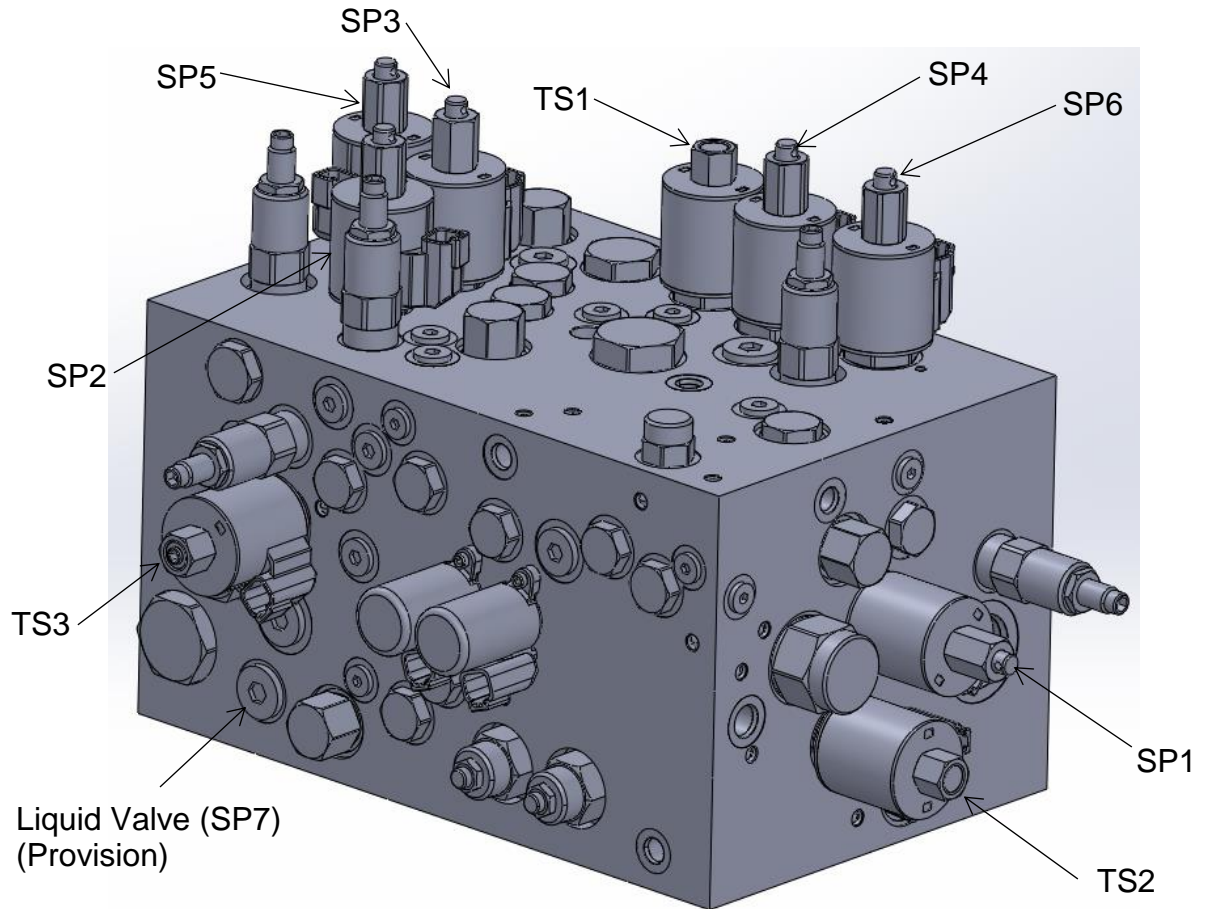

**\*Note: To Activate TS3- Main Relief use a 3/16" Allen wrench to turn the Manual Override Screw CW, to fully actuate TS3 turn the screw all the way. After functions have been actuated return screw back to starting position.**

**\*\*Note: Push Down and CCW on Red Manual Override until it locks in the Up position to Activate. To Deactivate push down and CW on the Red Manual Override until it locks in the Down position.**

**\*Warning - Reset all manual overrides to Normal Position when finished to prevent damaging the system.**