

**PRIMARY INPUT**



- Red = +12V
- Black = Ground
- White = PTO Override (B1)
- Green = Low Oil (B2)
- Blue = Anti-Ice Feedback (B3)
- Brown = PTO Enable (B4)
- Orange = Sensor Supply 5VDC (B5)
- Gray = Pump Pressure Transducer (B6)
- Green = Load Sense Pressure Trans. (B7)
- Purple = Oil Temperature (B8)
- Pink = Ground Speed (B10)
- Green = Auger Feedback (B11)
- Yellow = Ignition (B12)

**PRIMARY OUTPUT**

- White = Spinner Output (A7)
- Orange = Auger Output (A8)
- Brown = Main Relief (A11)
- Blue = PTO Output (A12)

**SECONDARY B OUTPUTS**

- Brown = Plow Up (B1)
- White = Plow Down (B2)
- Grey = Plow Down Relief (B3)
- Blue = Plow Left (B4)
- Purple = Plow Right (B5)
- Yellow = Hoist Up (B6)
- Orange = Hoist Down (B7)
- Pink = Hoist Down Relief (B8)
- Black = Hoist Up Disable (B9)
- Gray = Body Up Alarm (B10)
- Green = Power Float Relief (B11)
- Blue = Power Float On/Off (B12)

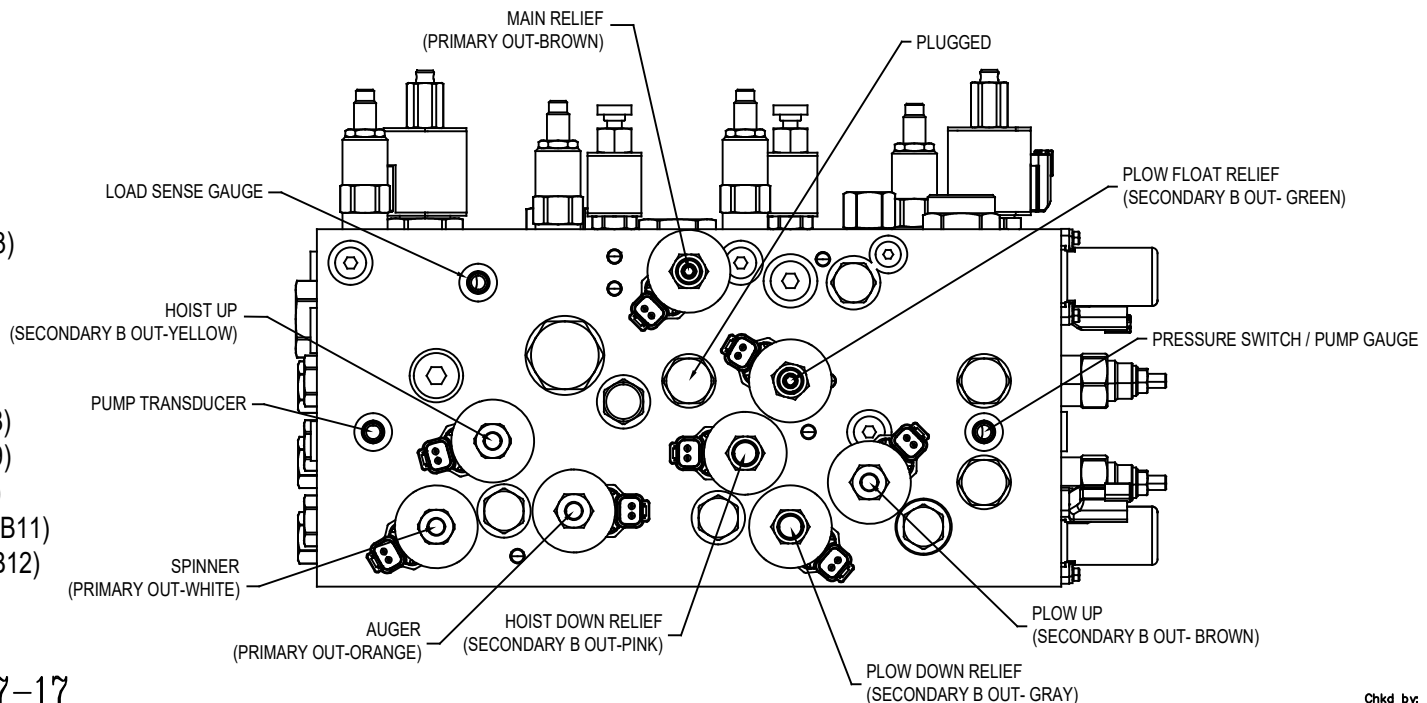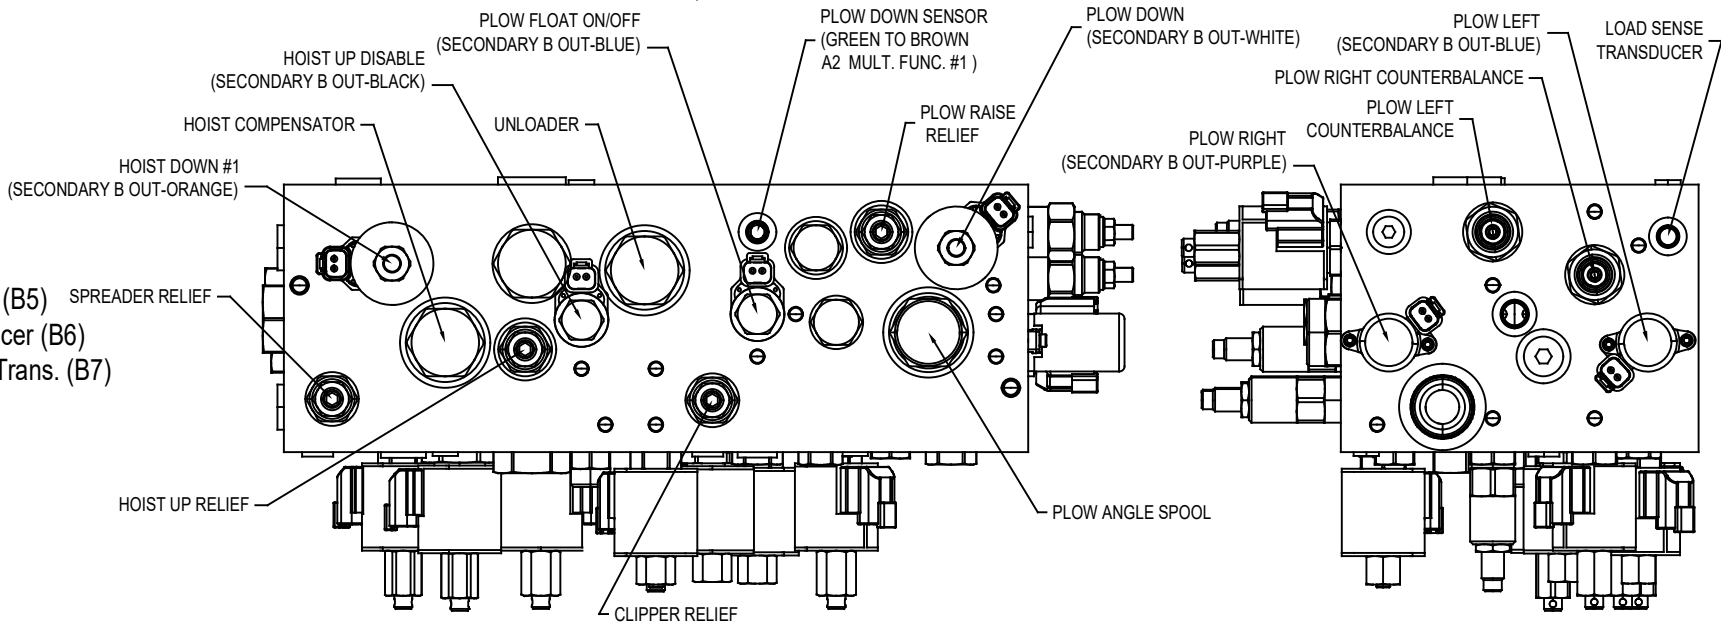

MANIFOLD: HF114517-17

