



MANUAL OVERRIDE

Solenoid Valve for **CS11 & CS21**



The solenoid valve supplied with this PTO has a manual override feature which will allow the PTO to be engaged without electrical power. Mount the valve in a location that is easily accessible to the operator and clear of any moving chassis parts, heat sources, pinch points, and clear of the PTO output shaft.

TO ACTIVATE:

Pull knob and twist to hold valve in the “ON” position. Pull and twist in opposite direction to deactivate.

⚠ Stay clear of any moving or potentially moving components. Do not operate without blocking the vehicle wheels and any chassis/body/cylinders as these can cause serious injury or death.

⚠ The manual override feature is intended for emergency situations only.



**Muncie®
Power
Products**

IN07-08 Printed in the U.S.A.
© Muncie Power Products, Inc. 2007

Muncie Power Products, Inc. Member of the Interpump Hydraulics Group
General Offices and Distribution Center • P.O. Box 548 • Muncie, IN 47308-0548
(765) 284-7721 • FAX (765) 284-6991 • E-mail info@munciepower.com
Web site <http://www.munciepower.com>

Drive Products, Exclusive Agents for Canada, ISO Certified by an Accredited Registrar

