




**Muncie[®]
Power
Products**

**KEEP IN VEHICLE
READ OPERATING INSTRUCTIONS
INSIDE BEFORE OPERATING PTO**

RS4S-P82E3-H1*P REAR MOUNT SERIES

**INSTALLATION INSTRUCTIONS
AND OPERATOR'S MANUAL**

For Eaton Precision Transmission

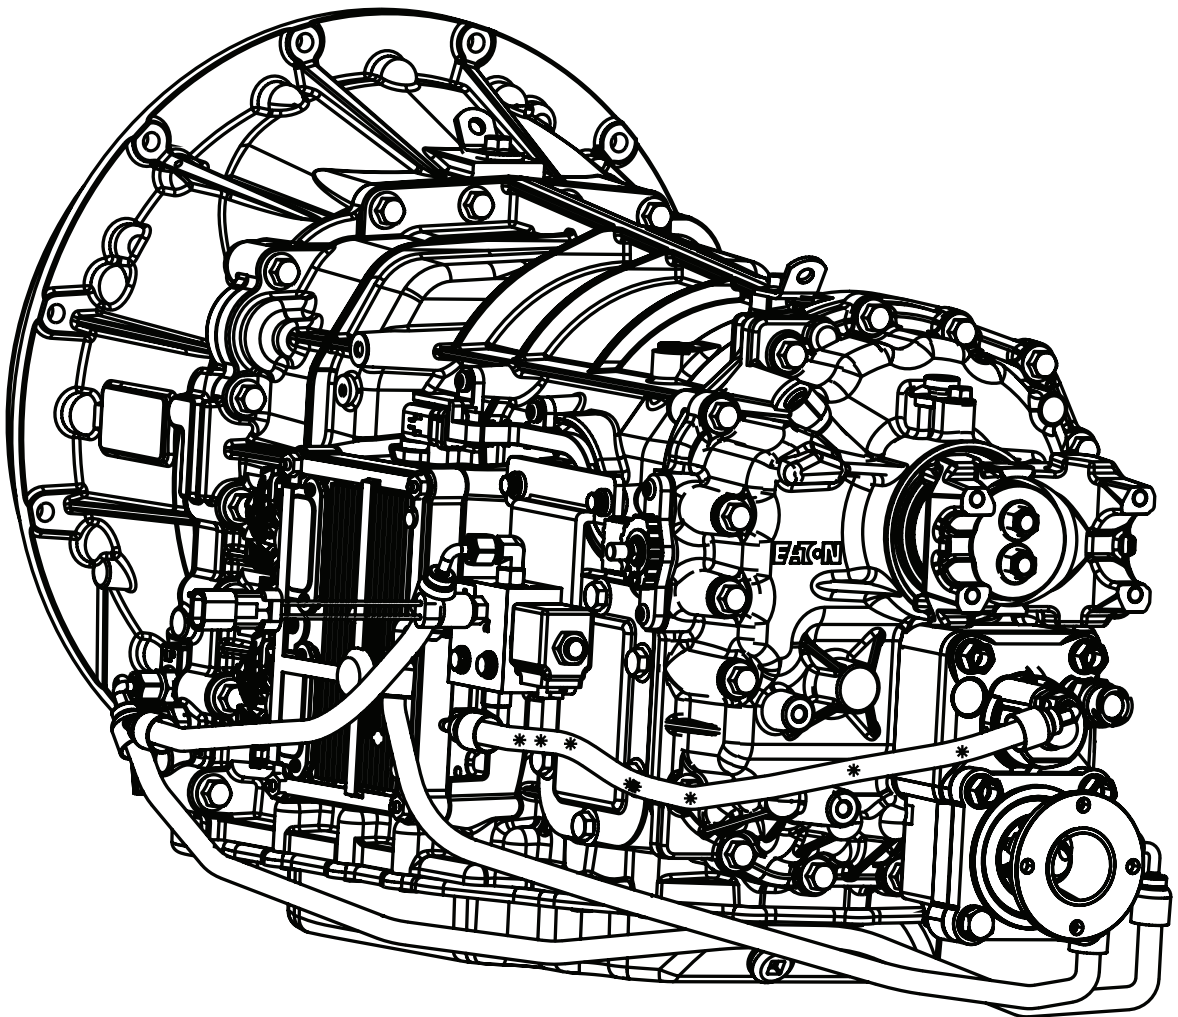

⚠️ WARNING!

ALWAYS READ AND UNDERSTAND THE ENTIRE MANUAL COMPLETELY BEFORE INSTALLATION OR OPERATION OF PTO AND DRIVEN EQUIPMENT INCLUDING THESE WARNINGS AND OPERATOR'S INSTRUCTIONS IN SECTION 3!

- ALWAYS DISENGAGE THE PTO WHEN THE DRIVEN EQUIPMENT IS NOT IN OPERATION.
- DO NOT ATTEMPT TO INSTALL OR SERVICE ANY POWER TAKE-OFF WITH THE TRUCK ENGINE RUNNING. PUT IGNITION KEYS IN YOUR POCKET BEFORE GETTING UNDER TRUCK.
- DO NOT ALLOW TRUCK ENGINE TO BE STARTED WHILE WORKERS ARE UNDER TRUCK.
- BEFORE WORKING ON A VEHICLE PLACE TRANSMISSION IN NEUTRAL OR PARK, SET BRAKES, AND IMMOBILIZE TRUCK WHEELS WITH SUITABLE CHOCKS.
- BE SURE TO BLOCK ANY RAISED BODY OR MECHANISM BEFORE WORKING ON OR UNDER EQUIPMENT.
- INSTALLED POWER TAKE-OFFS MUST NEVER BE SHIFTED IN OR OUT OF GEAR BY ANY MEANS EXCEPT BY THE CONTROLS IN THE CAB OF THE TRUCK.
- STAY CLEAR OF SPINNING DRIVESHAFTS TO AVOID BECOMING ENTANGLED AND INJURED.
- IT SHALL BE THE RESPONSIBILITY OF THE INSTALLER OF A MUNCIE POWER TAKE-OFF TO DECIDE WHETHER TO INSTALL GUARDS IN THE PTO AND/OR DRIVELINE AREA BECAUSE OF POTENTIAL EXPOSURE TO DANGER. THIS IS BECAUSE MOST MUNCIE PTOS ARE INSTALLED BY EQUIPMENT DISTRIBUTORS OR MANUFACTURERS AND THEREFORE, THE RESPONSIBILITY OF THE INSTALLATION IS BEYOND THE CONTROL OF MUNCIE POWER PRODUCTS.
- OBTAIN PROPER TRAINING BEFORE OPERATING THIS MACHINERY.
- DO NOT INSTALL OR OPERATE EQUIPMENT WHICH HAS NOT BEEN PROPERLY SPECIFIED FOR YOUR VEHICLE.
- INSTALLERS ARE TO INSURE THAT PTO COMPONENTS DO NOT INTERFERE WITH ANY CHASSIS COMPONENTS, INCLUDING BUT NOT LIMITED TO VEHICLE CROSSMEMBERS, FRAME RAILS, DRIVESHAFTS, EXHAUSTS, CONVERTERS, FUEL LINES, ETC. WHILE VEHICLE IS STATIONARY OR MOBILE.
- ALLOW THE VEHICLE, PTO AND DRIVEN EQUIPMENT TO WARM UP WHEN OPERATING IN WEATHER WHERE TEMPERATURES ARE NEAR OR BELOW FREEZING 32° F (0° C).
- INSTALL SEPARATE CONTROLS FOR PTO AND DRIVEN EQUIPMENT.
- ALWAYS INSTALL THE SAFETY LABELS PROVIDED AND PLACE THE OPERATOR'S MANUAL IN THE VEHICLE GLOVE COMPARTMENT.

The PTO is supplied with a packet containing warning labels. If you did not receive any, or if you need extra, you may order them, no charge, by phone, email or mail. They are available through your nearest Muncie® distributor or at the number and address below:

1-800-FOR-PTOS (1-800-367-7867)
Muncie Power Products, Inc.
P.O. Box 548
Muncie, IN 47308-0548
info@munciepower.com

© Muncie Power Products, Inc. 2010

⚠️ This symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury.

Note: Muncie Power Products is not liable for damages, and consequential damages, related to lack of compliance with previous suggestions and guidelines.



RS4S-P82E3-H1*P REAR MOUNT SERIES INSTALLATION INSTRUCTIONS AND OPERATOR'S MANUAL FOR EATON PROCISSION TRANSMISSION

TABLE OF CONTENTS

Important Safety Information.....2

SECTION 1 - INSTALLATION INSTRUCTIONS

Preliminary PTO Installation..... 4-5

Rear PTO Mounting & Installation 6-9

Activation Lines Installation 10-12

SECTION 2 - WIRE HARNESES, SCHEMATICS, & AUXILIARY WIRING INSTRUCTIONS

PTO Wiring Installation 13

PTO Driveline Installation..... 14

Pump Selection & Installation..... 14-15

SECTION 3 - OWNER'S/OPERATOR'S PTO SHIFTING PROCEDURES & PRECAUTIONS

PTO Shifting Procedures & Precautions..... 16

PTO Operation 17

PTO Maintenance 17

Notes..... 18

Power Take-off Warranty 19

SECTION - 1

INSTALLATION INSTRUCTIONS

ALL INSTALLERS MUST READ THE FOLLOWING

PTO AND ACTIVATION KIT INSTALLATION INSTRUCTIONS

Always wear safety glasses. Read entire manual before starting installation.

IMPORTANT: Disconnect vehicle battery prior to installing electrical and electric/hydraulic activation kits.

- A. Vehicle manufacturers may have specific locations for accessing electrical power and activating hydraulics. The body builder manual or company representative for the vehicle chassis should be consulted prior to installing electrical or hydraulic systems.
- B. Route wires and activation lines away from rotating and high temperature components. Use appropriate looms and bulk head pass-thru's wherever possible to avoid rubbing through insulation or tubing and causing an electrical short or oil leak.
- C. Follow all Federal Motor Vehicle Safety Standards (FMVSS) for your vehicle.
- D. Where electrical grounds are indicated, be sure that they are good ground connections, with straight paths to the vehicle battery ground. (Many vehicle cabs are insulated from the vehicle frame and a weak ground is a very common cause for malfunctions).
- E. When installing hydraulic components, be certain to follow common installation and testing procedures. If you are not familiar with acceptable installation procedures request instructions and guidance from the hydraulic equipment supplier.
- F. Caution should be taken by installer with any PTO installation to insure components do not interfere with any chassis component during installation or when vehicle is operated.
- G. Cold weather start conditions require that the transmission be started and warmed prior to engaging PTO and using equipment. Hydraulic pumps should be run at idle and under no load conditions to allow oil to warm before activating hydraulic system.

INSTALLATION INSTRUCTIONS

▲ Danger! Read entire manual before starting installation. Always wear safety glasses.

1. There us a packet with the PTO which contains four (4) warning labels. Before adhering the labels, make sure the surfaces are free of dirt and grease. Place the labels supplied with the PTO as follows:

TRUCK FRAME LABELS

The two (2) Truck Frame Labels, which measure approximately 4" x 8", are to be placed on the outside of the vehicle frame rail. These labels are to be easily seen by anyone who might go under the truck or near to the PTO. One label is to be placed on each side of the vehicle. *See Figure 1.*

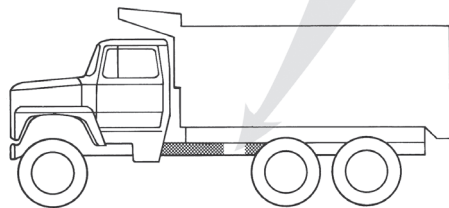
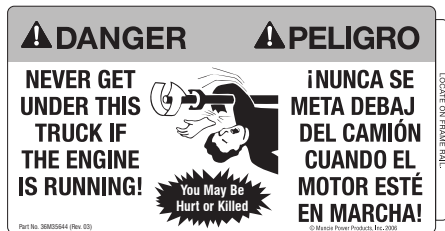


Figure 1

Visor and Dash Labels

The PTO Equipped Caution Label, which measures approximately 2" x 3", is to be placed within the cab of the vehicle and in easy view of the vehicle operator. It should be located near the PTO control, when the control is installed in the vehicle dash (see Figure 2). This label directs the operator to read the PTO operating instructions on the Visor Label. The Visor Label, which measures approximately 4" x 6 1/2", is to be placed **ON** the visor on the operator's side of the vehicle.

See Figure 2.

Note: Should the vehicle body installed on the chassis cover the frame rail, place the label on the body in a position easily visible by anyone who might go under the vehicle or near the PTO.

DO NOT PAINT OVER THE LABELS.


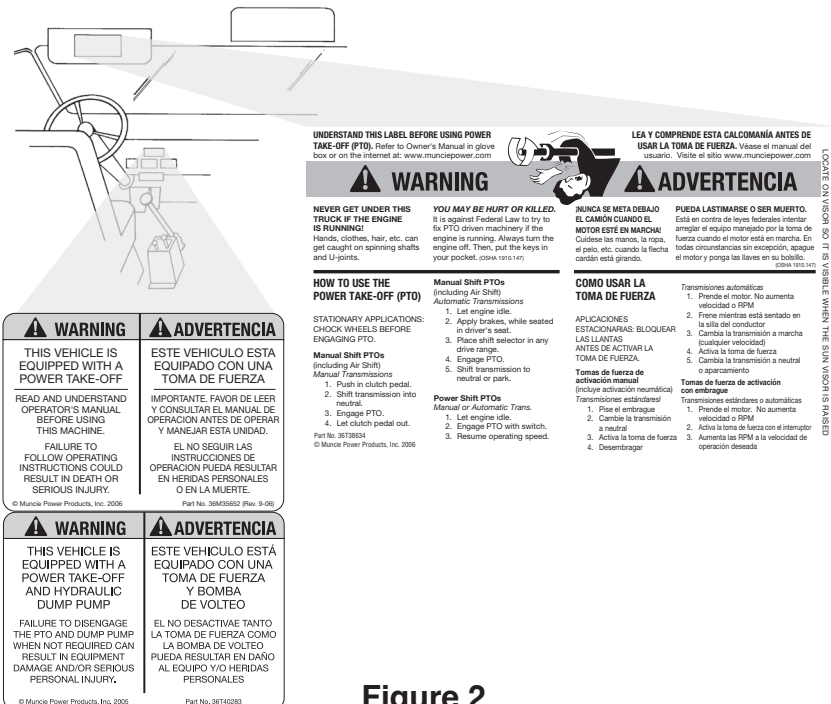


Figure 2


INSTALLATION INSTRUCTIONS

Always wear safety glasses. Read entire manual before starting installation.

2. This instruction is for the rear mounted PTO. This opening is found on the rear of the Precision transmission below the transmission main drive shaft.

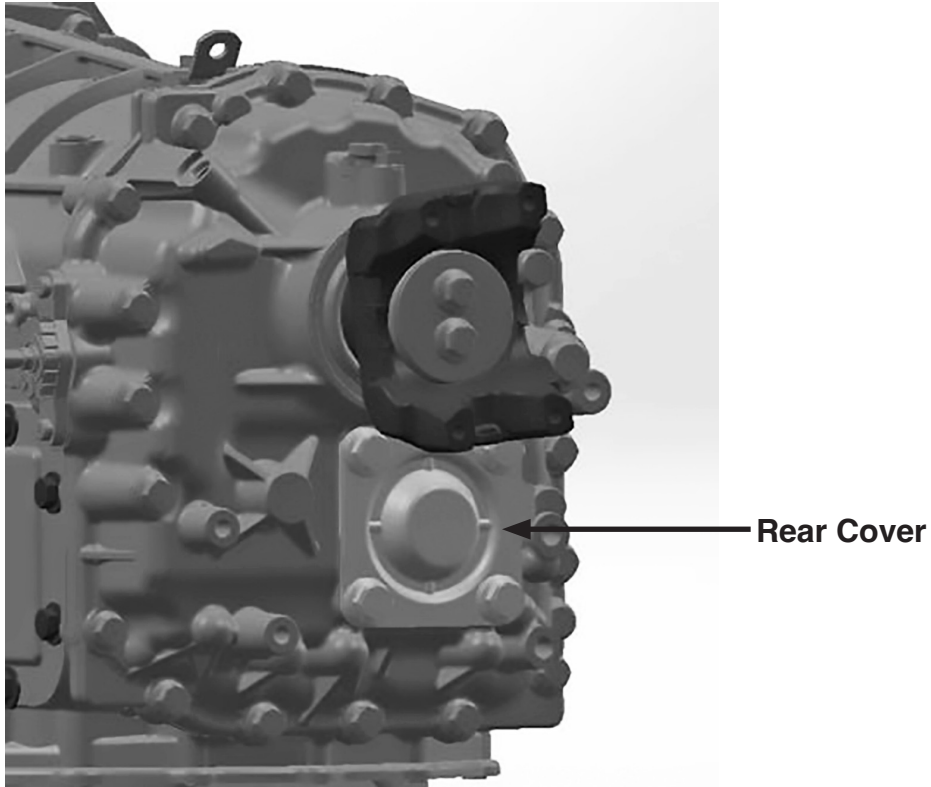

3. Remove the 4 cap screws holding the countershaft bearing cover and remove this cover.

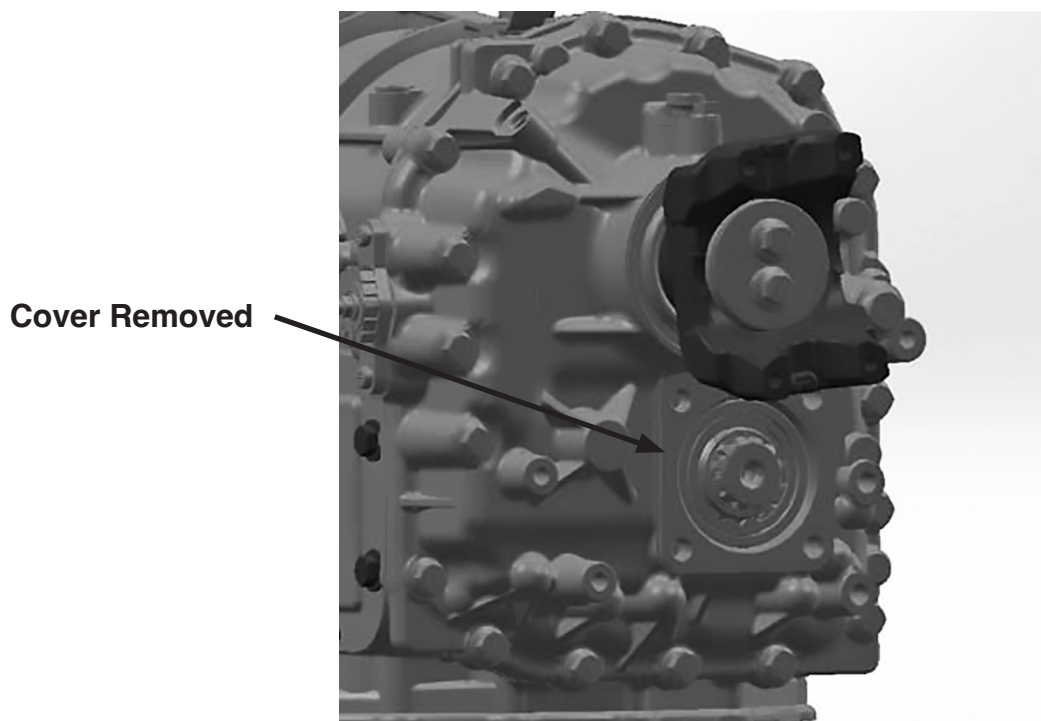

INSTALLATION INSTRUCTIONS


Always wear safety glasses. Read entire manual before starting installation.

4. Rotate the main drive shaft so that the transmission end yoke is parallel to the ground. This should allow clearance to mount the PTO studs and PTO. If your vehicle end yoke does not allow for mounting, then it may need to be removed during installation.



Main End Yoke

5. Included in the mounting kit is an installation ring. This ring is to be installed in the opening prior to installing the PTO.

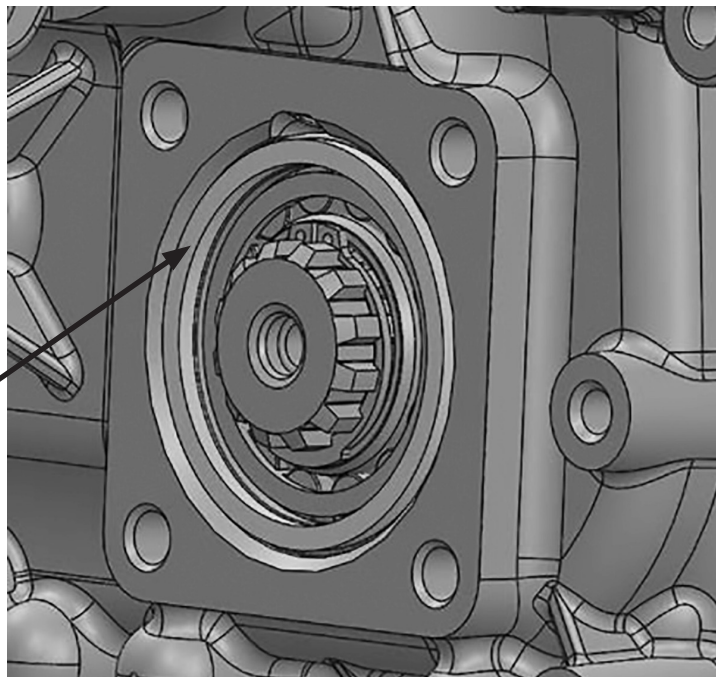


Installation Ring

INSTALLATION INSTRUCTIONS

Always wear safety glasses. Read entire manual before starting installation.

6. There are 4 Studs included in the mounting kit. The 2 longer studs are mounted in the lower two holes. The shorter studs are mounted in the upper two holes. Insert these studs with the shorter length threads in to the transmission.

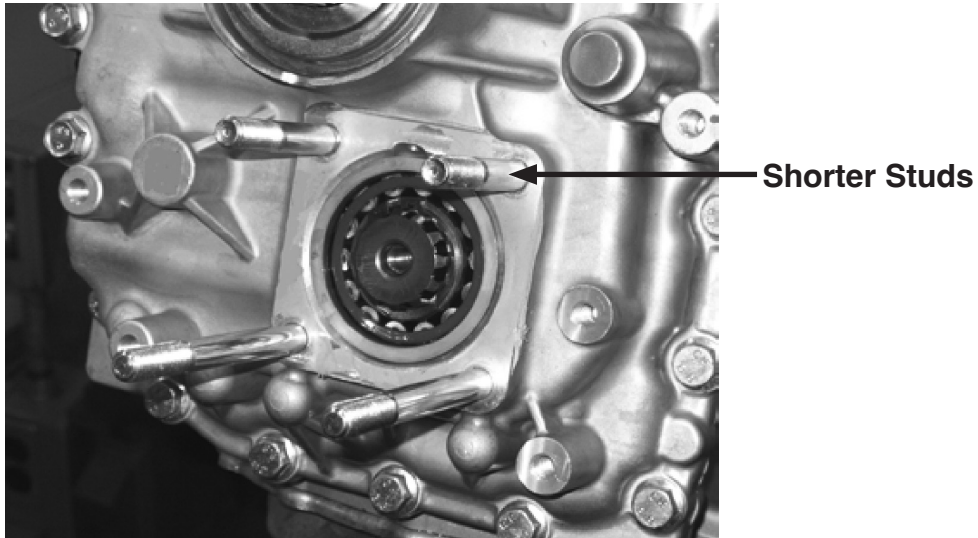


7. Slide the PTO over the studs as shown here. Using lock washers and hex nuts, mount the PTO into place. Torque the nuts to 45 ft.lb.




INSTALLATION INSTRUCTIONS

Always wear safety glasses. Read entire manual before starting installation.

8. Locate the transmission HP and LP ports found on the driver's side and forward on the Precision transmission. Remove the plugs in these two ports. Locate 2 hydraulic adapters 14 mm to ORFS and install them as shown.

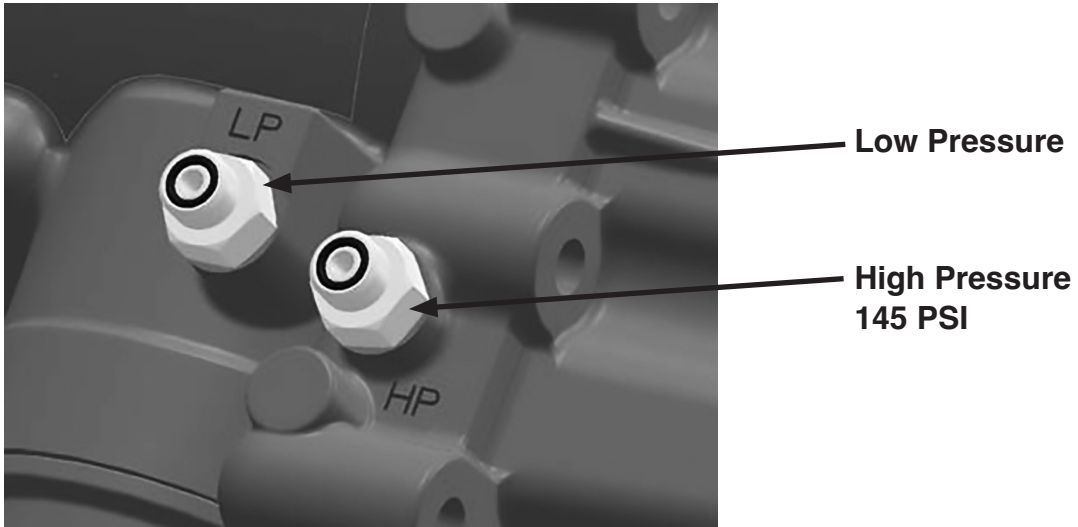


9. Locate the lubrication hose (35") and install one end in the port marked LP.

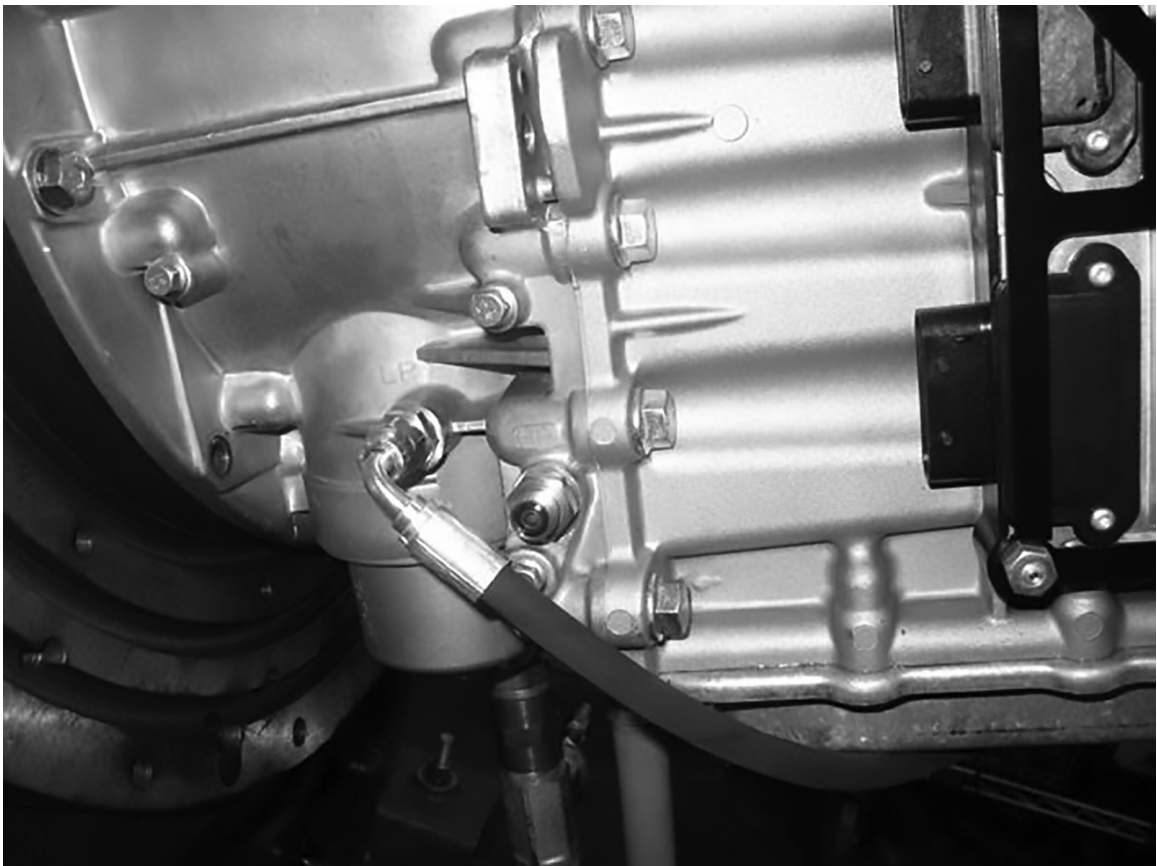

ACTIVATION LINES INSTALLATION


Always wear safety glasses. Read entire manual before starting installation.

10. Locate the 12 mm ORFS straight run tee from the installation kit and install it into the side of the PTO as shown.


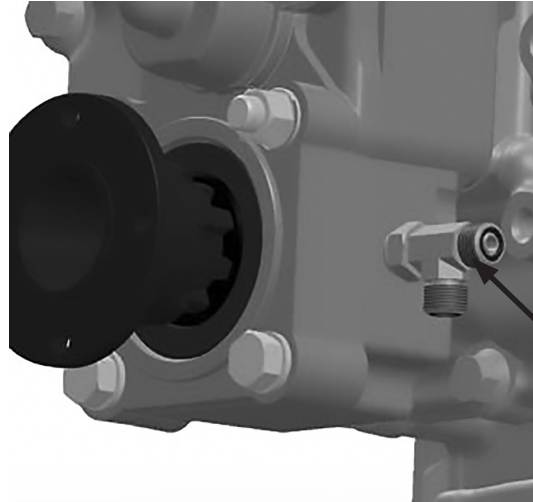


**12mm ORFS
Straight Run Tee**

11. Connect the other end of the lubrication hose assembly to the PTO straight run tee.

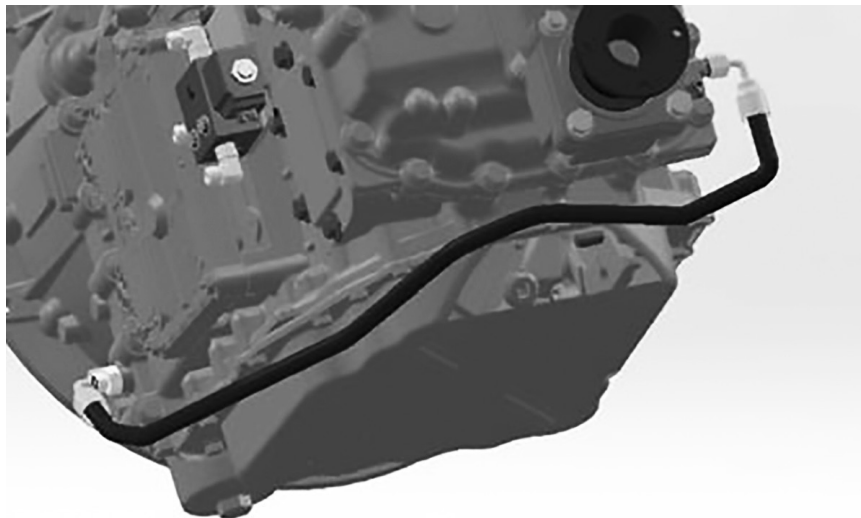

12. Install the ORFS 90 degree elbow into the 3 ports of the solenoid block and using the provided cap screws, lock washers, and nuts, mount the solenoid block to the transmission bracket.

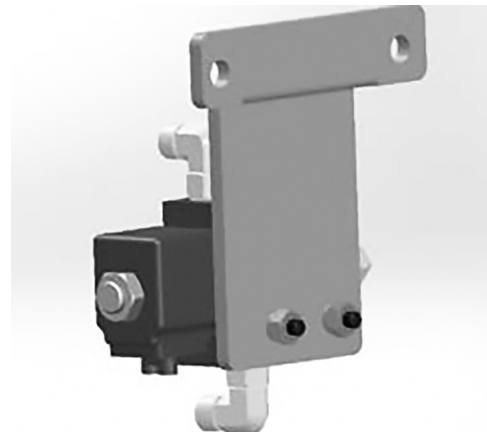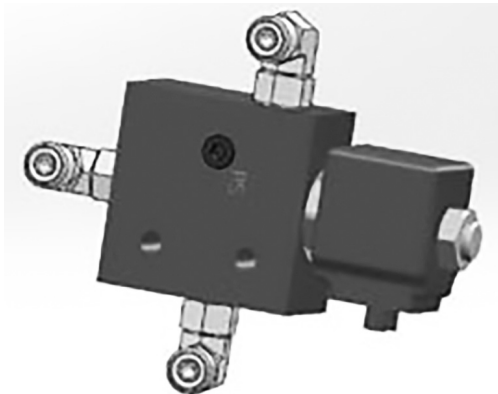


ACTIVATION LINES INSTALLATION

Always wear safety glasses. Read entire manual before starting installation.

13. Using two 10mm cap screws provided in kit, mount the transmission bracket to the driver's side of the transmission above the left side PTO opening.




14. Install the PTO pressure switch into the solenoid block.

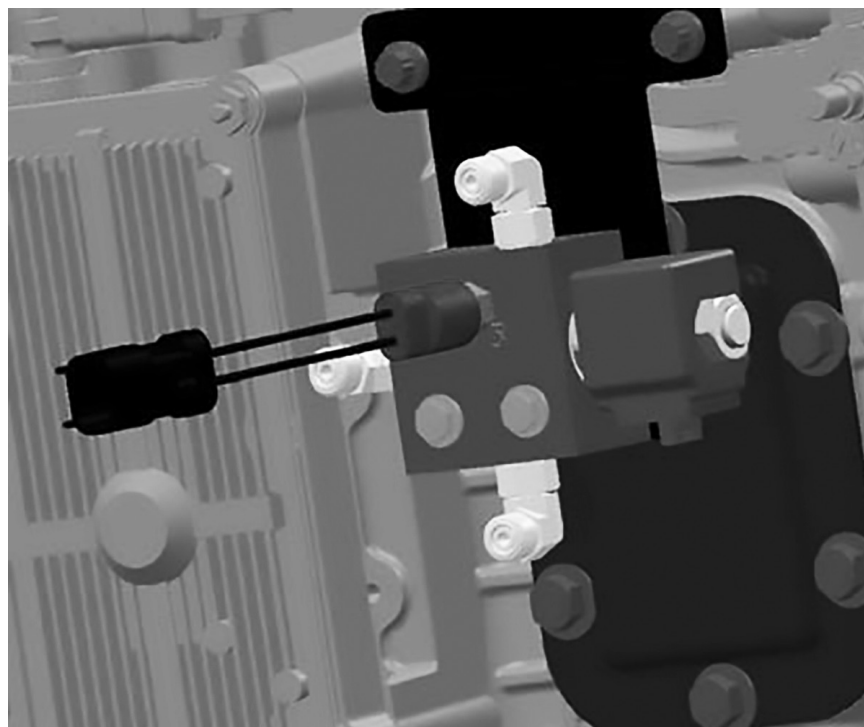


ACTIVATION LINES INSTALLATION

Always wear safety glasses. Read entire manual before starting installation.

15. Install the 20" long hose assembly (with 90 hose ends both ends) from the HP port to the IN port of solenoid block.

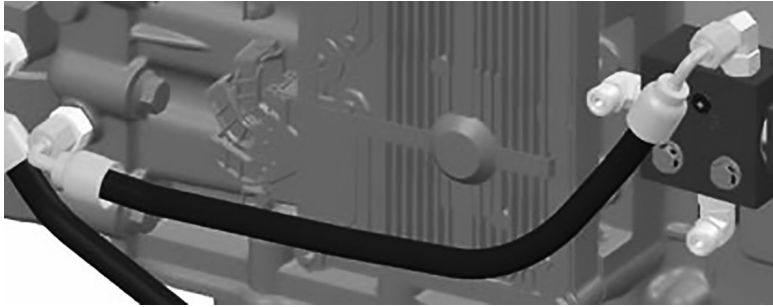


16. Install the 20" long hose assembly (with straight end fitting on one end) from the EXH port on the solenoid block to the other port on the PTO straight run tee.

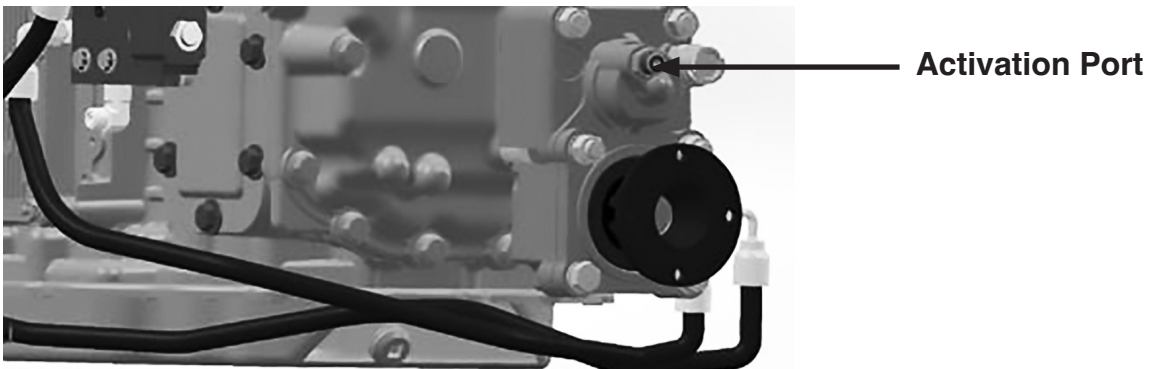

17. Install a straight 1/8G to ORFS adapter into the PTO activation port.



18. Install a 20" long hose assembly (with 90 hose ends, both ends) from the OUT port on the solenoid block to the PTO activation port on the PTO.

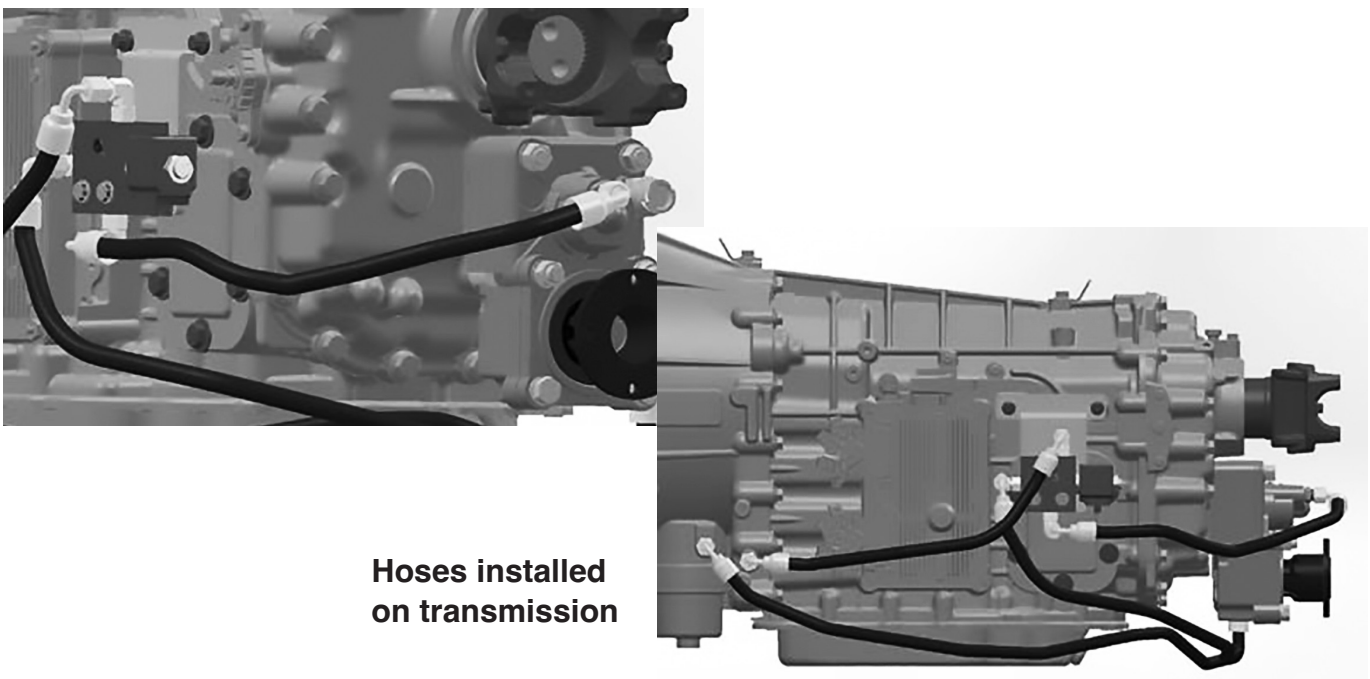


SECTION - 2

WIRE HARNESES, SCHEMATICS & AUXILIARY WIRING INSTRUCTIONS

19. Locate the body Connector on the left side of the transmission and make the following connections to the Eaton Connector.

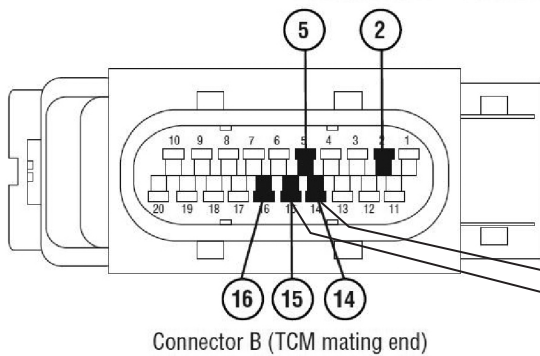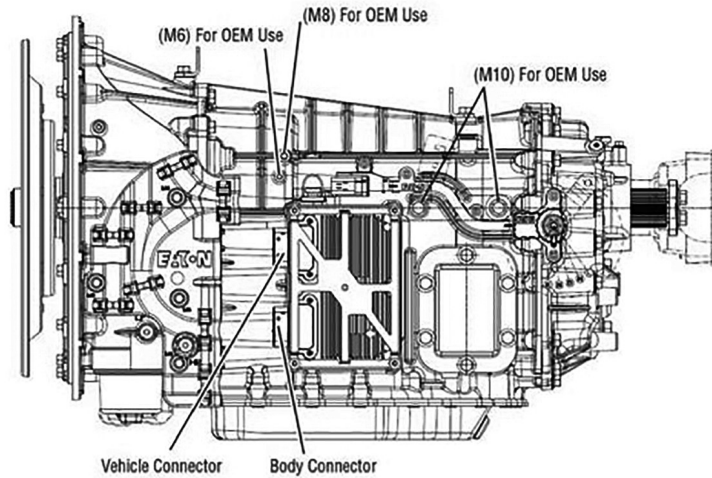


20-Way Body Connector
Body Connector Pin Out

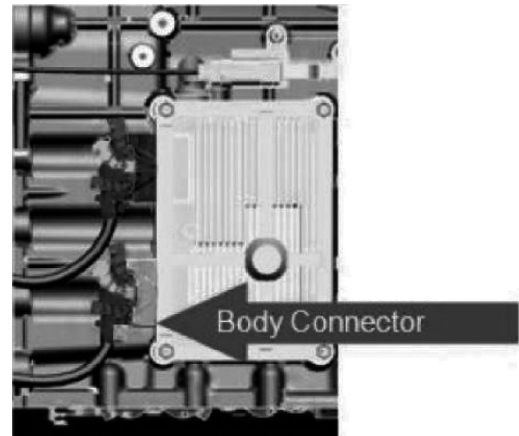

20. Using the Mert connection harness, clip off the terminal attached to the end of the wire and splice this into the wire at terminal 14. Connect the other wire to terminal 15.

21. The in-cab PTO harness is fed through the cab to the PTO. Mount the PTO switch in the supplied bracket or into a location on the dash that is accessible by the operator while seated in the driver's seat.

Connect Rear PTO Switch

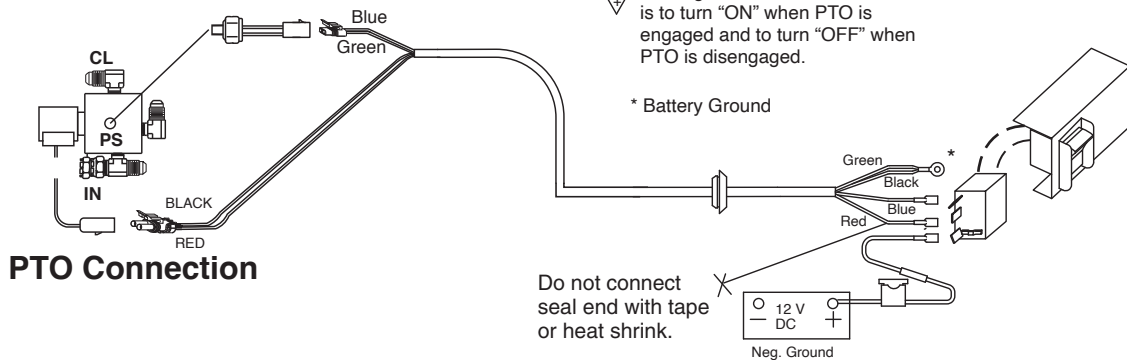


22. The PTO output can be either direct mounted hydraulic pump or drive shaft output. For the driveshaft version follow the proper procedure for connection to driven equipment.

PTO WITH DRIVELINE SYSTEM

If your system utilizes a driveline between the PTO and another device and if you have noise in your system that was not there before, the angularity or phasing of your driveline may be the cause.

Check driveline angularity and reduce total angularity per recommendation on chart and be sure the PTO shaft is parallel within 1.5° to the pump shaft (or driven unit). Drivelines must be in phase, that is, the yoke ears on the PTO and pump shafts must be in alignment, as illustrated below. PTO with Direct Couple Hydraulic Pump Installation


Max Speed (RPM)	Max TJA "A"
3,500*	5°
3,000*	5°
2,500	7°
2,000	8°
1,500	11°
1,000	12°

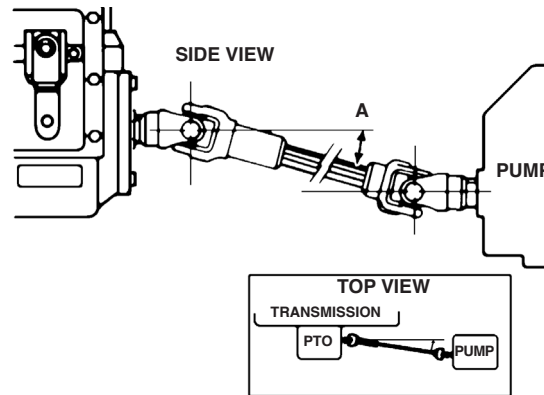

Note: For installations with angles in the top and side views, use the following formula to compute the true joint angles (TJA) $TJA = \sqrt{A^2 + B^2}$

*For speeds over 2,500 RPM, contact Muncie Power Products for approval.


PTO WITH DIRECT COUPLE HYDRAULIC PUMP

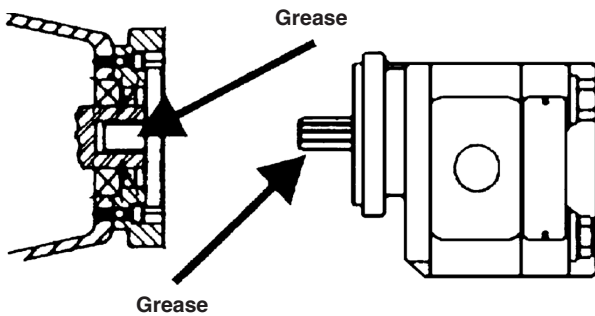

Before bolting the pump to the PTO, place non-seizing compound or grease on the PTO shaft and pump shaft. Reusing an existing pump will require inspection of the pump splines. Clean any old grease from pump prior to installation.


Do not force spline couplings together.

This requirement does not take into account the system duty cycles, vehicle vibrations, application, terrain, and other external influences. We recommend that direct mounted components of any size or weight be supported when these conditions are extreme or unknown.

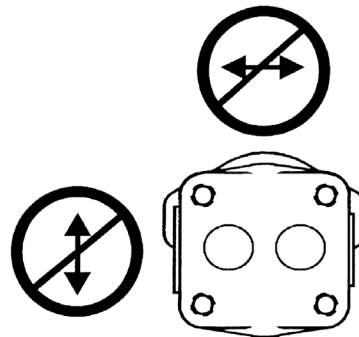

This recommendation is based upon our experiences to date. Bracket design illustrations and pump recommendations is to be used as a **GUIDELINE ONLY**. Bracket design shown is representative and is not to be duplicated for all applications. Any failure as a result of damage caused by unsupported weight attached to the PTO will affect any warranty considerations.

A bracket attached to two or more transmission bolts and two pump bolts is required. The bracket design should assure that there is no stress or force exerted on the pump or PTO shaft. If the vertical supports are greater than 20° off of perpendicular with the transmission main shaft then a reinforced “Z” bracket must be used. Reinforce horizontal members to prohibit flexing at bend or weld. Attach the bracket at the pump bolt closest to the center of gravity of the pump.

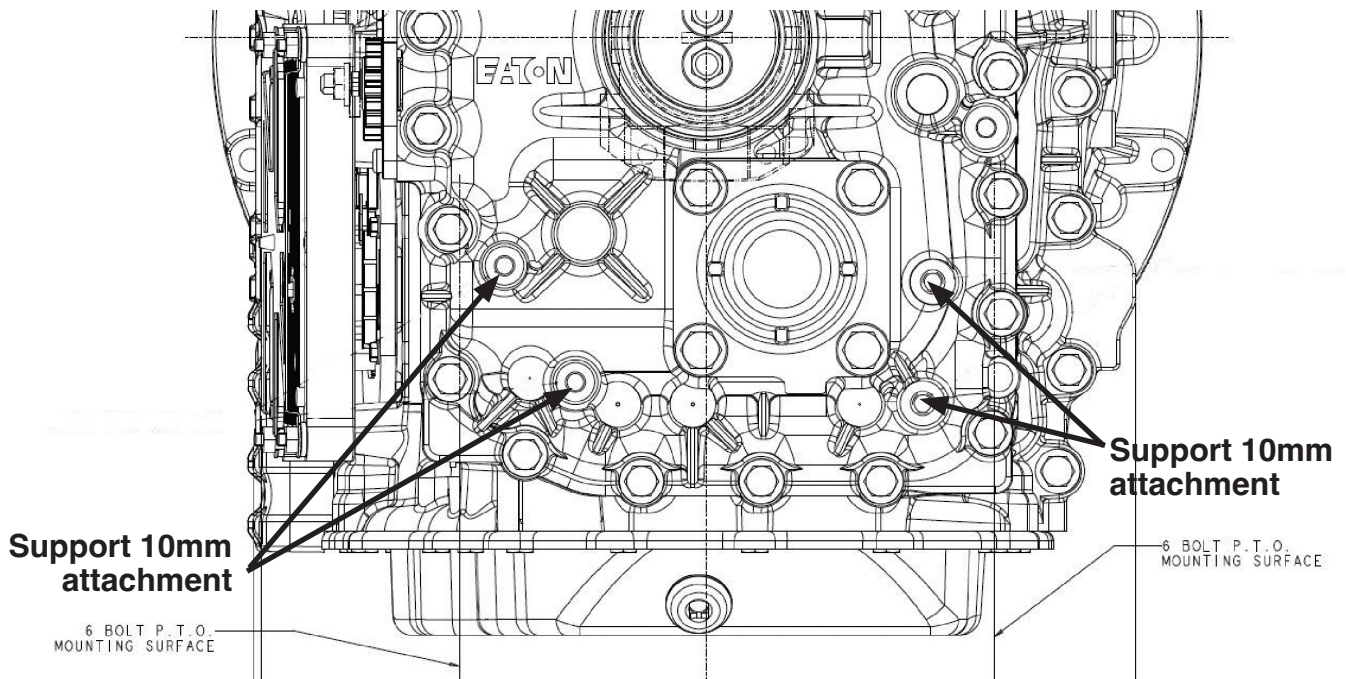

The Muncie direct mount flanges offer multiple mounting bolt holes which allow the flange to be rotated to multiple locations on the PTO for improved port location or clearance. Be sure to torque the capscrew to 25 ft.lb. It is advisable to use a thread locker to secure the cap screws (Loctite 241 or Nyloc or equivalent).

23. Check transmission oil level and refill transmission with manufacturer’s approved fluid if needed. Stay clear of PTO and driven components. Run engine for 5 to 10 minutes to check for leaks, always staying clear of rotating components.

24. Complete installation by placing warning labels as indicated on borders of the decals. Placement examples are illustrated on page 5.

After complete installation, installers need to check for leaks and proper mounting-torque of fasteners. Operate the equipment for an appropriate amount of time to establish for proper operation or per the equipment manufacturer’s recommendation. After shutting down equipment and engine, check for leaks. Allow unit to sit for 60 minutes, then check again for any leaks. Fix all leaks per manufacturer’s recommendation.

SECTION - 3

OWNER'S/OPERATOR'S POWER TAKE-OFF SHIFTING PROCEDURES & PRECAUTIONS

⚠ WARNING

Power Take-off Operation – Vehicle Stationary

WARNING – parking brake must always be set

WARNING – vehicle's wheels must always be chocked

WARNING – transmission must always be in neutral or park

WARNING – an operator must always be in the driver's seat whenever the engine is running and the transmission is in gear, in order to prevent or stop any unexpected movement of the vehicle which may cause injuries to the operator or others in the vicinity

- Read all operator's manuals and instructions for the equipment that you are operating on this vehicle.
- Obtain instructions and training for all operations of the equipment on this vehicle including those not covered by this instruction booklet.
- Never work alone when repairing or going under a vehicle for repair or maintenance.
- Always block any raised or movable components or devices when working on or around the vehicle as specified by the equipment manufacturer.
- Warning: PTOs may drive driven equipment with an exposed drive shaft which may cause severe injury or death if contacted.
- Care must be taken when using a PTO for any specific application that the PTO has been properly specified to match the transmission and auxiliary equipment. Improper specification and installation can cause severe damage to the vehicle transmission and the auxiliary components including driveshafts a driven equipment. Damaged components, equipment resulting in failure can cause serious personal injury to operators and persons in the vicinity.
- Always follow recommended procedures for selecting, installing, operating, or repairing a power take-off as found in Muncie Power operator's manuals, service parts lists and service manuals catalogs and application guides
- Never use a Muncie Power PTO above the recommended operation speed of the unit or the specified driven unit.
- Never use a power take-off that has not been specified for the output capabilities for the equipment being driven.

Rotating PTO drive shafts

It is recommended that direct couple hydraulic pumps be used whenever possible, but if your application requires the use of an exposed drive shaft it is the responsibility of the installer and purchaser to determine the best installation of a guard.

- Rotating shaft can snag clothing, skin, hands, hair, etc., and will cause serious injury or death.
- Do not go under the vehicle when the engine is running.
- Do not work near an exposed drive shaft with engine running.
- Auxiliary shaft can be installed with recessed or protruding set screws. If raised and square head set screws are chosen, then be aware that this is a catch point for clothes, skin, hair, hands, etc., and serious injury or death may result.

The output shaft of a PTO with internal clutch packs may rotate in cold temperatures with the PTO disengaged. PTO shaft rotation can cause sudden movement of the output shaft and attached drive shaft leading to personal injury or death. Allow transmission to operate for a few minutes before engaging PTO. Allow PTO to operate for a few minutes before actuating application controls.

Some O.E.M. chassis manufacturers have integrated electronic controls which require certain conditions to be met before engaging a PTO. These include, but are not limited to setting parking brake, foot off service brake, engine at idle, foot off accelerator pedal, and/or transmission selector in park or neutral.

⚠ THIS SYMBOL WARNS OF PERSONAL INJURY OR DEATH

STATIONARY PTO OPERATION

1. Set parking brake.
2. Engine idle. With the operator seated in the driver's seat and while activating the vehicle's brake, shift transmission lever into Park or Neutral.
3. Shift power take-off into or out of gear.

PTO MAINTENANCE

The power take-off, being an integral part of the transmission, should be serviced at the same intervals as the transmission. Transmission fluid changes should follow the interval recommended by the vehicle manufacturer for severe service. Transmission oil level is important. Checking for PTO leaks and checking the transmission oil level should be done on a regular basis.

Check for leaks upon delivery of the vehicle and after initial operation of your equipment. Loss of any oil can significantly affect or damage a transmission or PTO. Muncie Power Products, Inc. is not responsible for damage resulting from improper fastener installation, mounting torque or maintenance of the PTO.

The power take-off is also part of a system. The PTO system may include the activation control parts, a driveshaft, or hydraulic pump. This PTO system requires periodic checks and service. Typically the interval for maintenance checks of the PTO system depends on the application of the system. Every time the chassis is lubricated or a mechanic is under the vehicle the PTO system should be checked and serviced. For severe duty PTO system applications, it is recommended that the system be checked for service every 100 hours of use (this guideline can be adjusted based on past service history once you have it established). Service should include checking and lubricating direct mount pump shaft connections. PTO gears can be checked for wear by removing the inspection or shifter cover. If pitting, galling, cracking, or deformation of the gears or splines has occurred, then the PTO needs to be rebuilt or replaced.

Within the first week of use, recheck the installation of the PTO. Check for leaks and loose mounting hardware (studs, cap screws, nuts). Recheck the cable or lever connections for proper adjustment and tighten any loose connections. At regular maintenance intervals, check adjustments and lubricate moving parts, tighten and repair the connections, mounting hardware, cable, or lever linkages.

It is recommended that the operator/owner do a visual inspection for leaks under and around the vehicle and equipment on at least a weekly basis. Any leaks found should be corrected immediately.

Pumps that are mounted directly to the PTO output require the application of an anti-seize or a high-temperature, high-pressure grease. The purpose of this grease is to help make the PTO easier to service and to reduce the effects of fretting corrosion on the mating PTO and pump shafts. PTO applications under severe duty cycles and/or high torque requirements may require servicing this shaft connection by periodically re-greasing the shafts. Vehicles with low speed diesel engines are also severe applications due to the vibrations inherent in these vehicles. Fretting corrosion cannot be stopped by applying grease; the grease is only a deterrent.

NOTES

POWER TAKE-OFF WARRANTY

THE MUNCIE POWER TAKE-OFF IS WARRANTED TO BE FREE OF DEFECTS IN MATERIAL OR WORKMANSHIP AND TO MEET MUNCIE'S STANDARD WRITTEN SPECIFICATIONS AT THE TIME OF SALE. MUNCIE'S OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIRING OR REPLACING, AT MUNCIE'S OPTION, WITHIN ONE YEAR AFTER DATE OF ORIGINAL INSTALLATION ANY DEFECTIVE PART OR PARTS OR ANY PRODUCT NOT MEETING THE SPECIFICATIONS.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. MUNCIE MAKES NO WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR ANY PARTICULAR PURPOSE. MUNCIE'S OBLIGATION UNDER THIS WARRANTY SHALL NOT INCLUDE ANY TRANSPORTATION CHARGES OR COSTS OF INSTALLATION OR ANY LIABILITY FOR DIRECT, INDIRECT SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR DELAY. THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE, AND MUNCIE'S LIABILITY WITH RESPECT TO ANY CONTRACT OR SALE OR ANYTHING DONE IN CONNECTION THEREWITH, WHETHER IN CONTRACT, IN TORT, UNDER ANY WARRANTY, OR OTHERWISE, SHALL NOT, EXCEPT AS EXPRESSLY PROVIDED HEREIN, EXCEED THE PRICE OF THE PRODUCT OR PART ON WHICH SUCH LIABILITY IS BASED.

IF REQUESTED BY MUNCIE, PRODUCTS OR PARTS FOR WHICH A WARRANTY CLAIM IS MADE ARE TO BE RETURNED TRANSPORTATION PREPAID TO A MUNCIE SERVICE CENTER. ANY INSTALLATION OR USE NOT IN ACCORDANCE WITH CATALOGUE OR PACKAGE INSTRUCTIONS, OTHER IMPROPER USE, OPERATION BEYOND CAPACITY, SUBSTITUTION OF PARTS NOT APPROVED BY MUNCIE, USE WITH EQUIPMENT OTHER THAN THE EQUIPMENT ON WHICH THE POWER TAKE-OFF IS FIRST INSTALLED, OR ALTERATION OR REPAIR MADE TO THE POWER TAKE-OFF OTHER THAN AT A MUNCIE SERVICE CENTER SHALL VOID THIS WARRANTY. NO EMPLOYEE OR REPRESENTATIVE OF MUNCIE IS AUTHORIZED TO CHANGE THIS WARRANTY IN ANY WAY OR TO GRANT ANY OTHER WARRANTY.



**Muncie[®]
Power
Products**

A Member of the Interpump Group

IN17-10 (Rev. 06-22)

201 East Jackson Street, Muncie, Indiana 47305
800-367-7867 • Fax: 765-284-6991 • info@munciepower.com

Specifications are subject to change without notice. Visit www.munciepower.com
for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2016)