




MUNCIE START[®]

INSTALLATION INSTRUCTIONS


“6” or “7” PTO Special Feature/FR6Q Series PTO
 “DS”, “RS”, or “GS” PTO Shift Type/F20 Series PTO

Kit Contents - This kit includes the Muncie Start module and wiring harness adapter. The adapter will need to be installed onto main wiring harness included with PTO. The supplied adapter features 4-pin connectors to streamline this process. The module must be installed in the cab or under the hood in a protected area.

Connect to switch end of harness

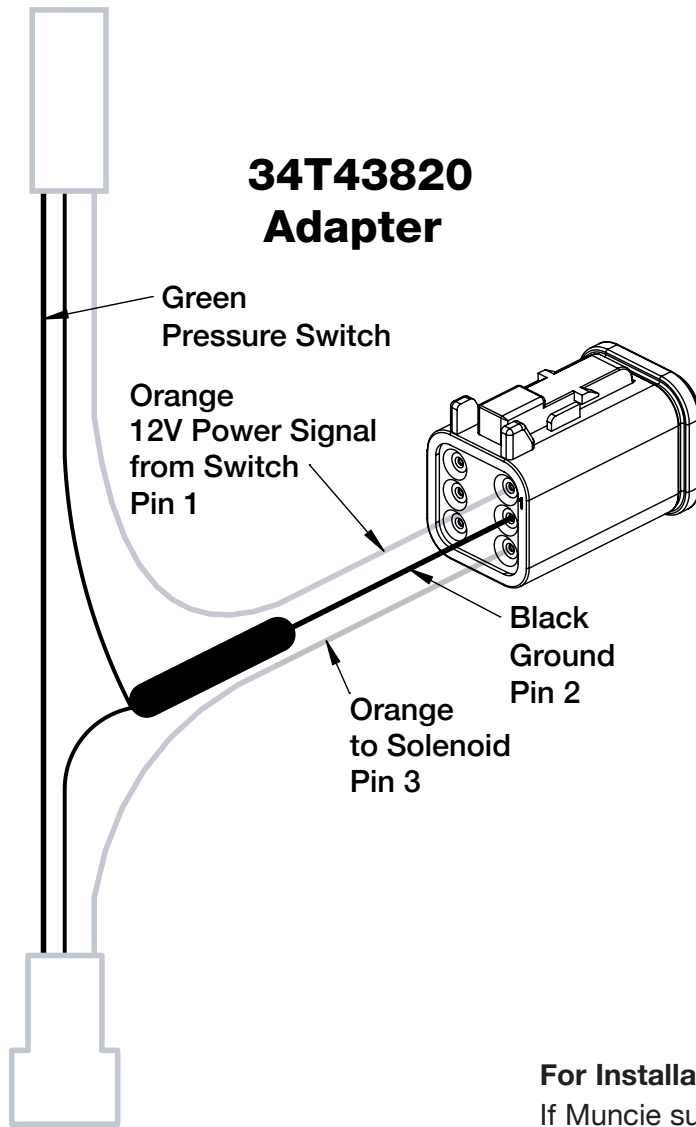

Connect to solenoid end of harness

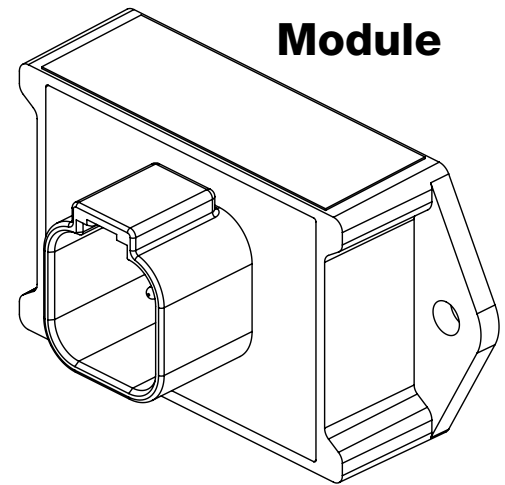

Module

Mount behind dash

Module P/N	PTO
38T63052	FR6Q
38T63053	F20

For Installations Not Using Muncie PTO Harness

If Muncie supplied harness will not be utilized (existing truck wiring, custom wiring, etc.), the module may be spliced into PTO activation circuit. Polarity is critical for module functionality. Use diagram above to make proper connections.



A Member of the Interpump Group

IN17-14 (Rev. 03-20)

201 East Jackson Street • Muncie, Indiana 47305
 800-367-7867 • Fax 765-284-6991 • info@munciepower.com • www.munciepower.com
 Specifications are subject to change without notice. Visit www.munciepower.com
 for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2017)