



P58-P60 SERIES PTO


INDICATOR SWITCH AND PLUG RELOCATION FOR RIGHT SIDE APPLICATIONS

P58/P60 Cover Plug Removal and Reinstallation


1. Before removing plug, take note of what it looks like fully installed in PTO cover. To remove plug, start by pinching ends of safety clip together and unhook center with small flat head screwdriver. Do not lose the safety clip.
2. Push plug into hole to disengage collet from hole, then gently pry between base of plug and cover.
3. Once the plug has been pulled out approximately $\frac{1}{8}$ " it can then be pulled free.



4. Push plug into hole until it locks in place. Pull on plug to confirm it is installed fully. Base should be sitting flush with top of hole.

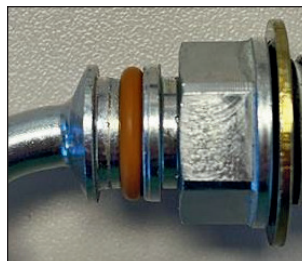

4a. Fully installed

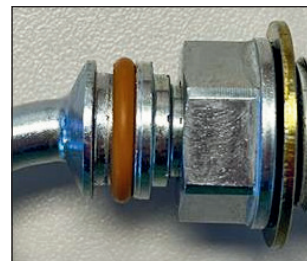

4b. Not fully installed

5. Install safety clip.




Torque switch
27 - 37 ft-lbs

Torque air fitting
7 ft-lbs

**Switch + air fitting
here for right side
application**

Switch and air fitting
must be relocated to
opposite side of cover
for right side PTO
applications

**Switch + air fitting
here for left side
application**

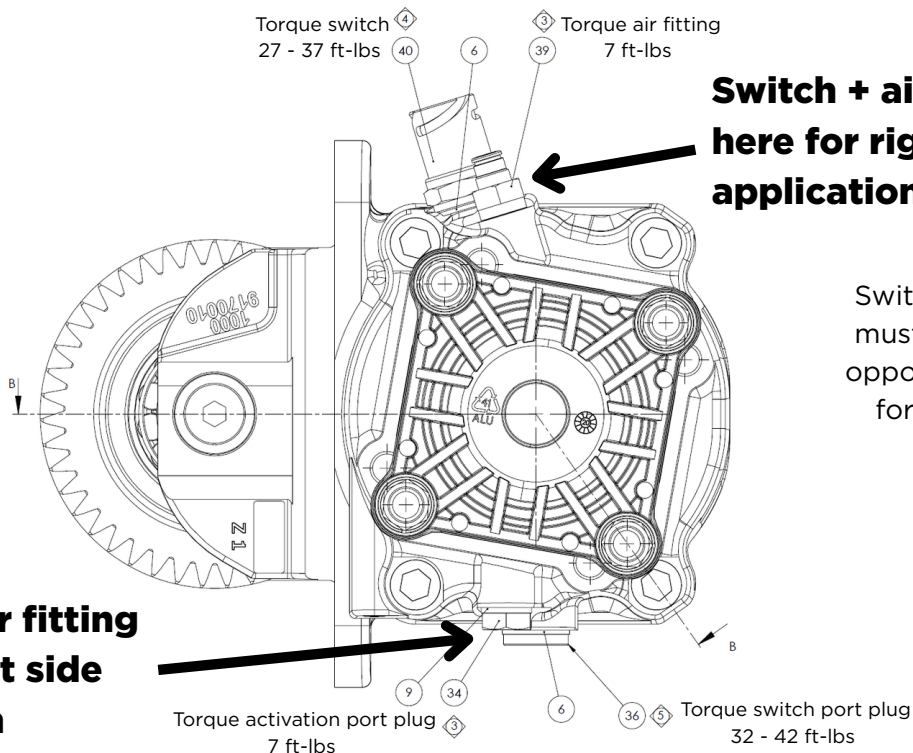

A Member of the Interpump Group

201 East Jackson Street, Muncie, Indiana 47305
800-367-7867 • Fax: 765-284-6991 • info@munciepower.com

Specifications are subject to change without notice. Visit www.munciepower.com
for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2025)