DETROIT DIESEL TRANSMISSION

REAR SIDE ONLY (BOTTOM OPENING TURN PAGE)






DT12-OC, DT12-OHE, DT12-OV

Footnotes (1, 2, & 3) REQUIRES PTO PREP - CODE See Footnote (2)


METRIC OPENING PTO DRIVE GEAR DATA:

 LOCATION: N/A PLMF: N/A PLV: N/A RPM: 948



	6-BOLT		FOOT	SHAFT		IGINE		ADAPTER	SPACER	STUD KIT SHIFT	@ 1,000 RPM OF PTO				
	TYPE	MODEL NUMBER	NOTES	ROTATION	НІ	LO	REV				TYPE	TORQUE	HP		
RPM.	SINGLE GEAR														
TO EXCEED 2,500	SINGLE SPEED MULTI GEAR	RS6S-P89M1-P1PX RS6S-P89M2-P1PX RS6S-P89M3-P1PX	1,2,3 1,2,3 1,2,3	CRNK CRNK CRNK	92 125 174			601K6950000 601K6950000 601K6950000			Elec/Air Elec/Air Elec/Air	317 317 295	60 60 57		
NOT	SH SERIES														
PUT SHAFT SPEED	CLUTCH SHIFT														
OUTPUT	1 FWD. 1 REV.														
₹	ADAPTE	ADAPTER TO CHANGE ROTATION No Adapter Available									REFER TO ADAPTER GEAR ASSEMBLIES IN INDEX				

8-BOLT		FOOT	SHAFT	ENGINE%			ADAPTER	SPACER	STUD KIT	SHIFT	INTERMITTENT RATING @ 1,000 RPM OF PTO	
TYPE	MODEL NUMBER	NOTES	ROTATION	HI	LO	REV				TYPE	TORQUE	HP
SINGLE SPEED MULTI GEAR												
1 FWD. 1 REV.												

 

FOOTNOTES:

- PTO output shaft speed show with transmission in LO Range. For HI Range multiply speed shown by 1.27.
- 2 PTO prep package required! Components for PTO activation are supplied with chassis, and do not come with PTO. Order code 362-822 (Driveline applications) or 362-825 (Hydraulic pump application) from Dealer at time of vehicle order. PTO shown with SAE-BB hydraulic drive output. 1410 companion flange change code to "D" output option.
- Direct mount pumps or direct mount components are limited to 29.5 lb.ft. bending moment at PTO pad. Contact Muncie Power should you need assistance calculating this value. Direct mount hydraulic pumps require metric hardware to mount pump. Pump support brackets are not permitted on rear PTO, as per the transmission manufacturer!

DETROIT DIESEL TRANSMISSION

DT12-OC, DT12-OHE, DT12-OV

Footnote (1, 2, 3, 4, 5, 6, & 7)

REQUIRES PTO PREP - CODE See Footnote (7)

No Adapter Available

BOTTOM OPENING ONLY (REAR OPENING TURN PAGE)

8-BOLT OPENING

PTO DRIVE GEAR DATA:

39T GEAR

LOCATION: Rear

PLV: 577 FPM

PLMF: 1.732 RPM: 1,000




REFER TO ADAPTER GEAR ASSEMBLIES IN INDEX

MUNCIE

CAUTION: MAXIMUM OUTPUT SHAFT SPEED NOT TO EXCEED 2,500 RPM

6-BOLT	PTO	FOOT	SHAFT		IGINE		ADAPTER	SPACER	STUD KIT	SHIFT	INTERMITTENT RATING @ 1,000 RPM of PTO	
TYPE	MODEL NUMBER	NOTES	ROTATION	HI	LO	REV	ADAFTEN	SPACEN		TYPE	TORQUE	HP
SINGLE GEAR												
SINGLE SPEED MULTI GEAR	TG8S-U6804-P4BX TG8S-U6805-P4BX TG8S-U6806-P4BX TG8S-U6806-P4BX TG8S-U6808-P4BX TG8S-U6809-P4BX TG8S-U6812-P4BX TG8S-U6813-P4BX TG8S-U6818-P4BX TG8S-U6818-P4BX		OPP OPP OPP OPP OPP OPP OPP OPP	53 69 90 106 130 135 166 189 213 253			40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479		Included	Elec/Air Elec/Air Elec/Air Elec/Air Elec/Air Elec/Air Elec/Air Elec/Air Elec/Air	285 270 245 230 230 205 210 207 184 155	54 51 47 44 44 39 40 39 35 29
SH SERIES												
CLUTCH SHIFT												
1 FWD. 1 REV.												

8-BOLT TYPE	PTO MODEL NUMBER	FOOT NOTES	SHAFT ROTATION	EN HI	IGINE LO	% REV	ADAPTER	SPACER	STUD KIT	SHIFT TYPE	INTERMITTENT RATING @ 1,000 RPM of PTO TORQUE HP	
SINGLE SPEED MULTI GEAR	828S-U6805-T4CX 828S-U6808-T4CX 828S-U6809-T4CX 828S-U6810-T4CX 828S-U6812-T4CX 828S-U6813-T4CX 828S-U6815-T4CX	NOTES	OPP OPP OPP OPP OPP OPP	49 78 97 104 120 138 155	LO	NEV	40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479 40TA6479	23M80062+23M80062	Included Included Included Included Included Included Included	Air Air Air Air Air Air	500 450 388 362 313 271 248	95 85 74 69 60 52 47
1 FWD. 1 REV.	828S-U6819-T4CX		OPP	185			40TA6479	23M80248	20MK8817	Air	190	36

 

FOOTNOTES:

ADAPTER TO CHANGE ROTATION

- 1 TG Series Input Gear: #03T34284 refer to kit program on pages 27 & 28.
- 2 Transmission manufacturer specified maximum PTO output speed is 2,500 RPMs.
- 3 Adapter 40TA6479 is required with all PTOs. Adapter and PTO sold separately.
- 4 Gasket 13T65089 (included with adapter) is required between PTO and adapter. Standard gaskets used between adapter and transmission.
- 5 Shifting of transmission with PTO engaged is not allowed, as per transmission manufacturer.
- 6 Use of clutch shift PTOs are not permitted at this time per the transmission manufacturer.
- PTO prep package required! Components for PTO activation are supplied with chassis, and do not come with PTO. Order code 362-1U1 (TG Series installations) or 262-805 (82 Series installations) from dealer at time of vehicle order.