




Muncie®
Power
Products

ASC SERIES DUMP PUMP CONSOLE

PARTS LIST AND SERVICE MANUAL

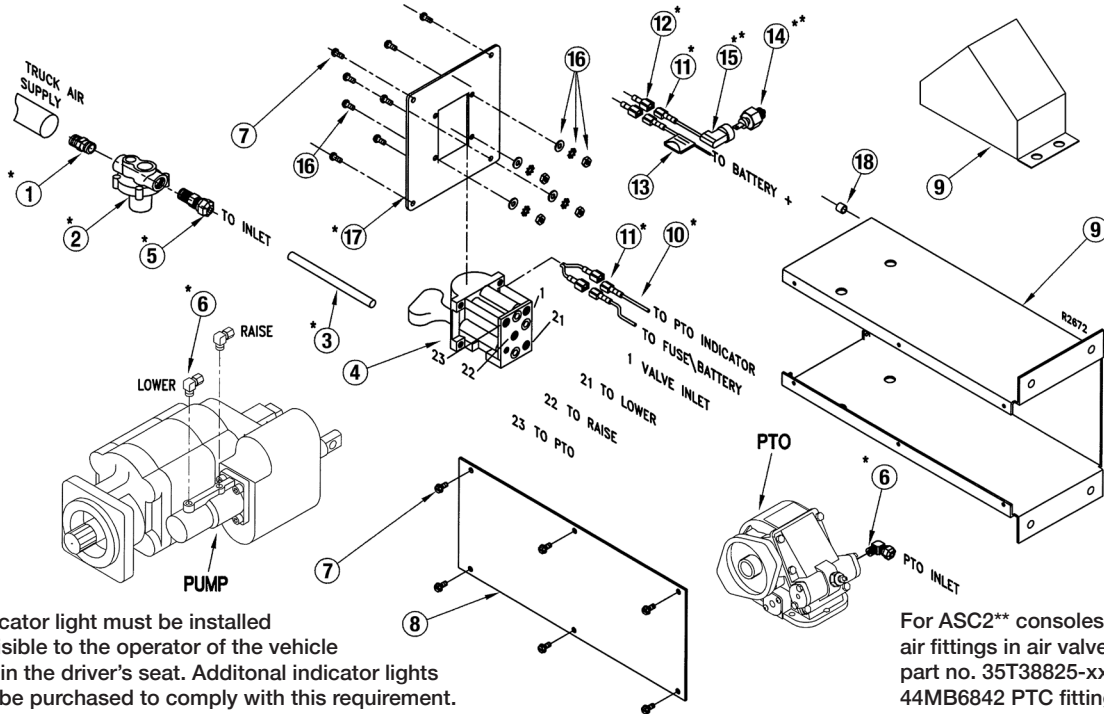

The PTO indicator light must be installed so that it is visible to the operator of the vehicle while seated in the driver's seat. Additional indicator lights may need to be purchased to comply with this requirement.

For ASC2** consoles with integral air fittings in air valve number 4. (Old part no. 35T38825-xxxx used. (4) 44MB6842 PTC fitting (not shown).

PARTS LIST AND DESCRIPTION

ITEM	QTY	PART NO.	DESCRIPTION	ITEM	QTY	PART NO.	DESCRIPTION
1*	1	44MB2164	Nipple	9a&b	1	57T36653	Console Housing (5 x 5) AC1-A&B****
2*	1	31M15759	Pressure Protection Valve	9c	1	57T38870-8	Console Housing (3sq x 8 in.) AC1-C****
3*	1	45M44430	Tubing 30 ft.	9d	1	57T38870-13	Console Housing (3sq x 13 in.) AC1-D****
Air valve is described in the last 4 characters in the air console kit No.				9e	1	57T38882-8	Console Housing (10 x 8 in.) AC1-E****
4a	1	35T40821-AXDX	PTO Auto KO, center detent	9f	1	57T38882-13	Console Housing (10 x 13 in.) AC1-F****
4b	1	35T40821-MXDX	PTO Man KO, center detent	9g	1	57T38882-4	Console Housing (10 x 4 in.) AC1-G****
4c	1	35T40821-AXDD	PTO Auto KO, center & lower detent	9h	1	57T38870-4	Console Housing (3 x 4 in.) AC1-H****
4d	1	35T40821-MXDD	PTO Man KO, center & lower detent	9j	1	57T39260	Console Housing (Angle Mnt.) AC1-J****
4e	1	35T40821-ADDD	PTO Auto KO, 3 Pos. detent	10*	12	37M18000	18 Ga. Wire/ft.
4f	1	35T40821-MDDD	PTO Man KO, 3 Pos. detent	11*	3	PM514A	Terminal
5*	1	44MB6844PTC	Tube fitting, push to connect	12*	3	PM513A	Spade Terminal
6*	3	44MB6942PTC	Tube fitting elbow, push to connect	13	1	33T36299	Fuse Assembly
7	4	19T36355	Self Tap Screw, AC1-C, D, E, F, G, H, J****	14**	1	NA	PTO Indicator Switch
7	6	19T36355	Self Tap Screw, AC1-A, B****	15**	1	34MA1367	Booted Connector
7	4	19M08075	Self Tap Screw, AC1-A, B, C, D, E, F, G, H****	16	1	36MK1007	Bolt Kit (not used with AC1-C&D)
Console housings & cover plates dependent upon air console kit no.				Faceplates dependent upon air console kit number			
8a&b	1	57T36654	Cover Plate (5 x 12) AC1-A&B****	17a	1	36T8892	Faceplate-centered (5 x 5) AC1-A****
8c	1	57T38844-8	Cover Plate (3 x 8 in.) AC1-C****	17b	1	36T8891	Faceplate-offset (5 x 5) AC1-B****
8d	1	57T38844-13	Cover Plate (3 x 13 in.) AC1-D****	17c&d	1	36T8987	Faceplate (3 x 3) AC1-C, D & X****
8e	1	57T38843-8	Cover Plate (10 x 8 in.) AC1-E****	17e&f	1	36T8890	Faceplate (3 x 10) AC1-E & F****
8f	1	57T38843-13	Cover Plate (10 x 13 in.) AC1-F****	18	2	23T38894	Spacer-Nylon, AC1-E, F, G & H****
8g	1	57T38843-4	Cover Plate (10 x 4 in.) AC1-G****	N.S.*	2	08470	Cable Tie
8h	1	57T38844-4	Cover Plate (3 x 4 in.) AC1-H****	N.S.*	5	1416AC	Grommet
				N.S.	1	36T38893	Decal AC1-J****

Note: Console housings will vary in shape and size from actual drawing.

* In ASC2 aire installation kit 48T40826. (Old ASC1 Air Kit was 48T38898
** Shipped with PTO

ASC INSTALLATION INSTRUCTION TIPS ARE ON REVERSE SIDE.

ASC INSTALLATION INSTRUCTION TIPS

- Install the air shift controller up through the underside of the faceplate.
- Make all electrical and pneumatic connections before installing side panel.
- The side panel will face away from the driver's seat for easy removal.
- Do not tighten faceplate screws completely until side panel is installed and all six mounting screws are tightened.
- Mounting bolts to secure the console to the vehicle cab floor not provided.
- When drilling the faceplate for accessory components, layout pattern using a paper template (not provided) or the actual part to be installed.



Member of the Interpump Group

SP02-02 (Rev. 06-16)

201 East Jackson Street • Muncie, Indiana 47305
800-367-7867 • Fax 765-284-6991 • info@munciepower.com • www.munciepower.com
Specifications are subject to change without notice. Visit www.munciepower.com
for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2007)