


DUMP PUMP CONSOLE WITH AIR SHIFT PTO & PUMP

INSTALLATION INSTRUCTIONS AND SERVICE PARTS LIST

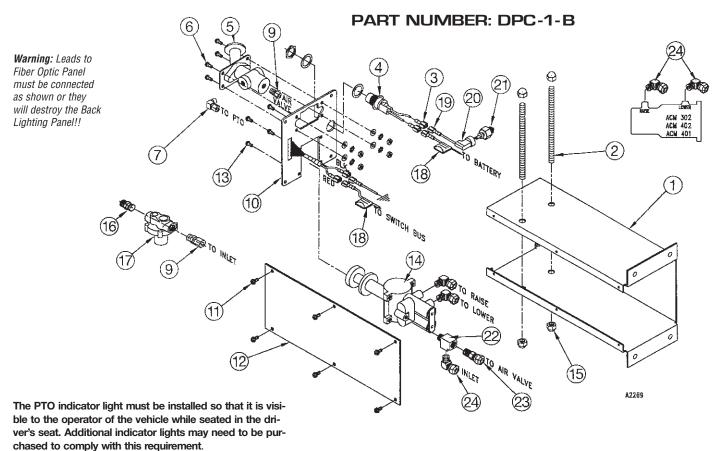

PARTS LIST AND DESCRIPTION

| ITEM | QTY | PART NUMBER | DESCRIPTION |
|------|-----|-------------|------------------------|
| 1 | 1 | 57T36653 | Console Base |
| 2 | 2 | 20M35844-7 | Threaded Rod |
| 3 | 2 | PM-513A | Male Spade Connector |
| 4* | 1 | 32M12001 | Indicator Light (12V) |
| 5* | 1 | 35M18653 | PTO Air Shifter |
| 6* | 1 | 36MK1007 | Shifter Bolt Kit |
| 7* | 2 | 44MB6942 | 90 Degree Tube Fitting |
| 8* | 2 | 45M44430 | Air Tubing (30 ft) |
| 9* | 1 | 44MB6842 | Tube Fitting |
| 10 | 1 | N/A | Console Face Plate |
| 11 | 10 | 19T36355 | Screw |
| 12** | 1 | 57T36654 | Console Side Plate |
| 13 | 4 | 19M52438 | 10-32 Allen Head Screw |
| 14 | 1 | 1461-AM | Pump Air Shifter |

| QTY | PART NUMBER | DESCRIPTION | | |
|--|--|--|--|--|
| 4 | 22M35847 | Acorn Nut | | |
| 1 | 44MB2164 | Pipe Nipple | | |
| 1 | 31M15759 | Pressure Valve | | |
| 2 | 33T36299 | Fuse Assembly | | |
| 4 | PM-514A | Female Spade Connector | | |
| 1 | 34MA1367 | Booted Connector | | |
| 1 | 30M13003 | PTO Indicator Switch (1&4) | | |
| | 30M13004 | PTO Indicator Switch (2&3) | | |
| 1 | 44MB2252 | Street Tee | | |
| 1 | 44MB6842 | 1/8" NPT Straight Tube Adpt. | | |
| 5 | 44MB6942 | 1/8" NPT 90° Tube Adpt. | | |
| NOTES: * These items are not included in this package (except for 1 Fuse Assy. Item 18). They are included with the Air Shift PTO. | | | | |
| | 4 1 1 2 4 1 1 1 1 5 * These Assy. | 4 22M35847 1 44MB2164 1 31M15759 2 33T36299 4 PM-514A 1 34MA1367 1 30M13003 30M13004 1 44MB2252 1 44MB6842 5 44MB6942 * These items are not included Assy. Item 18). They are included Assy. Item 18). | | |

| N.S. N.S. N.S. N.S. | ACM-302 ACM-402 ACM-401 60V-VAK | Air Cylinder Kit for E/EH Dump Pump Air Cylinder Kit for S2/S3 SA Hoist Pump Air Cylinder Kit for S4/S5 DA Hoist Pump Air Cylinder Kit for 60/61V Series Valve |
|------------------------------|--|--|
| N.S. | 90V-VAK | Air Cylinder Kit for 90/91V Series Valve |

ASSEMBLY
INSTRUCTIONS
ARE ON
REVERSE SIDE

AIR SHIFT PTO INSTALLATION INSTRUCTIONS

- 1) We begin with the plumbing assembly [refer to the diagram above]. Tighten the 90° tube fitting (item 7) into the side of the PTO air shifter (item 5) and tighten the straight tube fitting (item 9) into the bottom of the PTO air shifter (item 5). Next, install the street tee adapter (item 22) into the supply port of the pump air shifter (item 14). On the pump air shifter (item 14) install the two 90° tube adapters (item 24) in the two output ports opposite the supply port as shown in drawing. Install the straight tube adapter (item 23) in the bottom of the street tee (item 22). Tighten the 90° tube adapter fitting (item 24) into the side on the street tee (item 22).
- 2) The PTO air shifter (item 5) will need to be installed in the console faceplate (item 10) from the top down. Use the bolts, washers, and nuts in the shifter bolt kit (item 6) to secure the PTO air shifter (item 5) to the console face plate (item 10). The pump air shifter (item 14) will need to be installed from the bottom up. Use the Allen head screws (item 13) to secure the pump air shifter (item 14) to the console face plate (item 10).
- 3) Cut a piece of air tubing (item 8) to fit between the straight tube adapter (item 23) on the PTO air shifter and the 90° tube adapter (item 24) on the street tee (item 22) installed on the pump air shifter (item 14). Cut the hose long enough for complete engagement on the fittings, but short enough to prevent a kink in the hose. Next, crimp on the 2 male spade connectors (item 3) to the 2 leads from the indicator light (item 4). Insert the indicator light (item 4) through the bottom of the face plate (item 10) and fasten tightly with a lock washer on each side as shown.
- 4) Align the mounting holes in the face plate (item 10) with the mounting holes in the top of the console base (item 1). The face plate (item 10) will only go on one way (fiber optic panel wires hanging closest to the opening). When aligned start the self threading screws (item 11) into the top of the console base (item 1). Do not tighten the face plate mounting screws (item 11) until all fasteners on the console have been tightened [these (item 11) will be the last to be tightened]. When the face plate (item 10) is located, slide the threaded rods (item 2) through the console base (item 1) and snug acorn nuts (item 15).
- 5) Route the plastic tubing from the pressure protection valve (item 17) to the 90° tube adapter (item 24) at the (supply) port of the pump air shifter (item 14). Route another length of tubing (item 8) from the PTO air shifter fitting (item 9) to the 90° tube adapter (item 23) on the PTO air shifter (item 5). Route a length of tubing (item 8) from each of the fittings on the pump air cylinder to the pump air shifter (item 14).
- 6) Now for the electrical assembly. Start by crimping on the four female spade connectors (item 19) to the wires leading up to the optical panel and to the indicator light (item 4). When attached, connect the indicator leads to the indicator light (item 4) and the back lighting leads to the optical panel.
- 7) Fasten the console side plate (item 12) to the console base (item 1) with the six mounting screws (item 11). Tighten firmly. Now, go back and tighten the four face plate mounting screws (item 11).



© Muncie Power Products, Inc. 2009



