

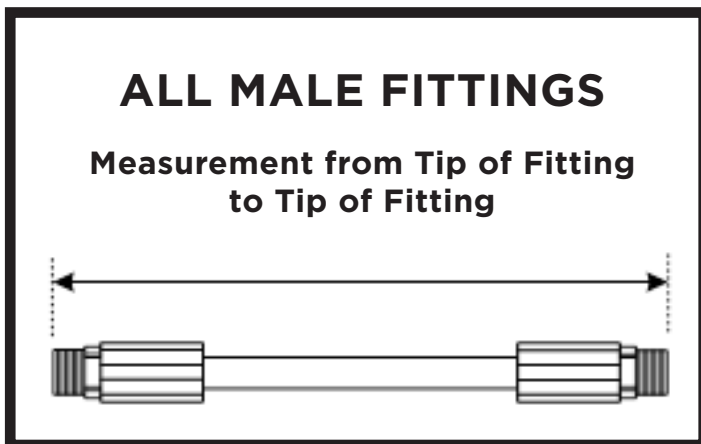
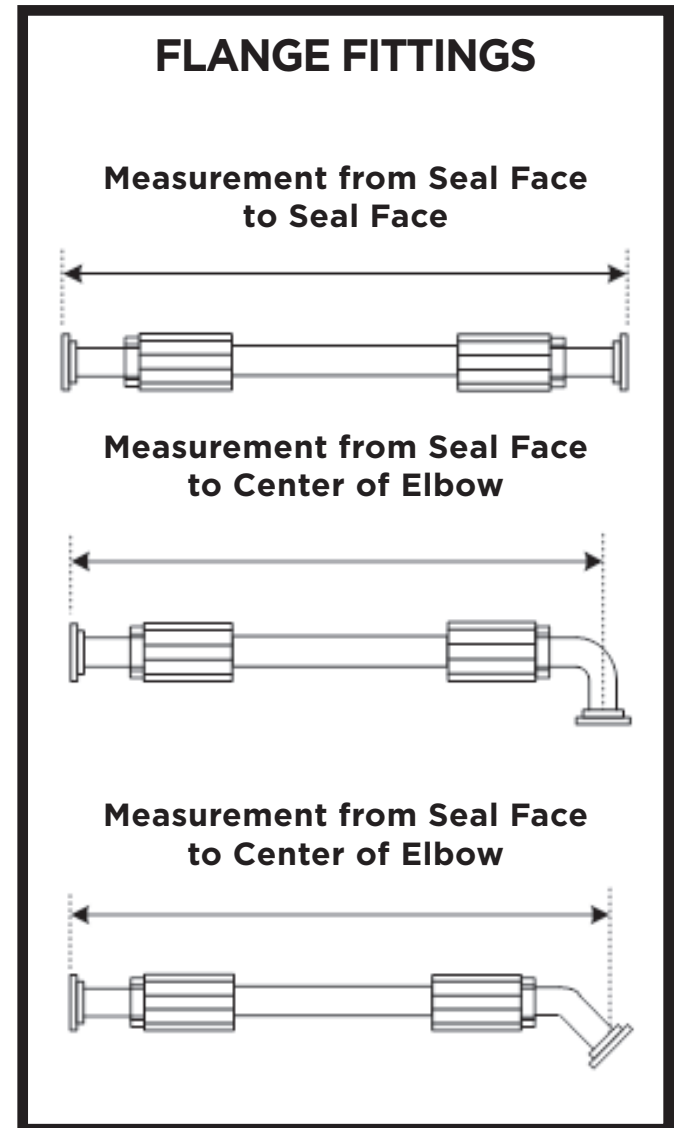


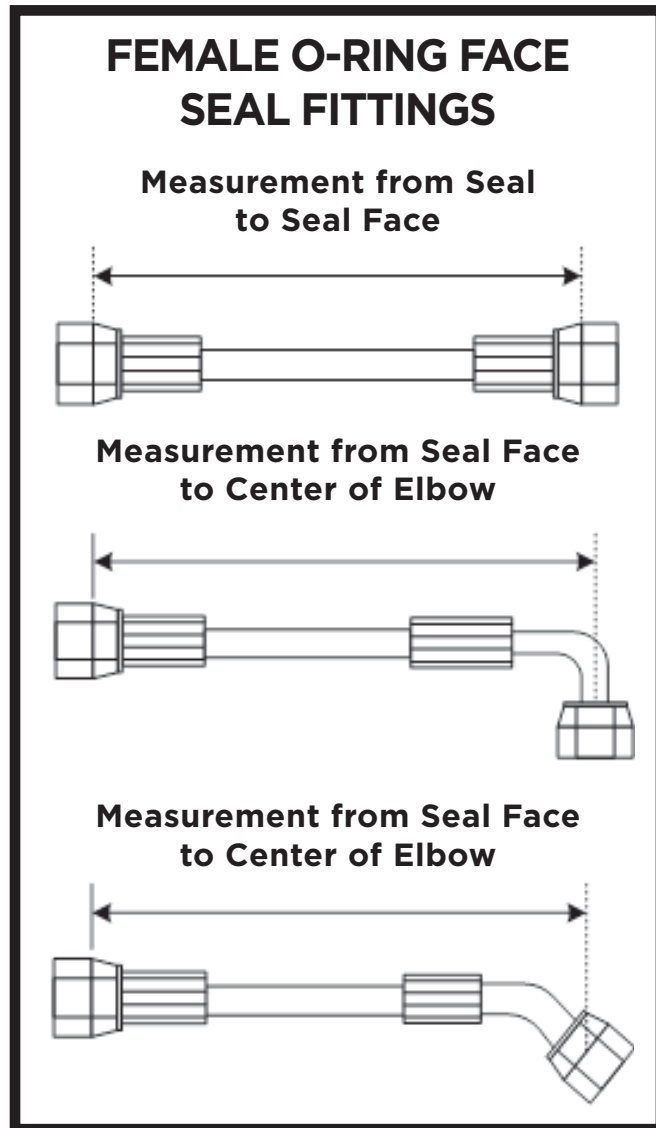


MEASURING HYDRAULIC HOSE ASSEMBLY LENGTHS

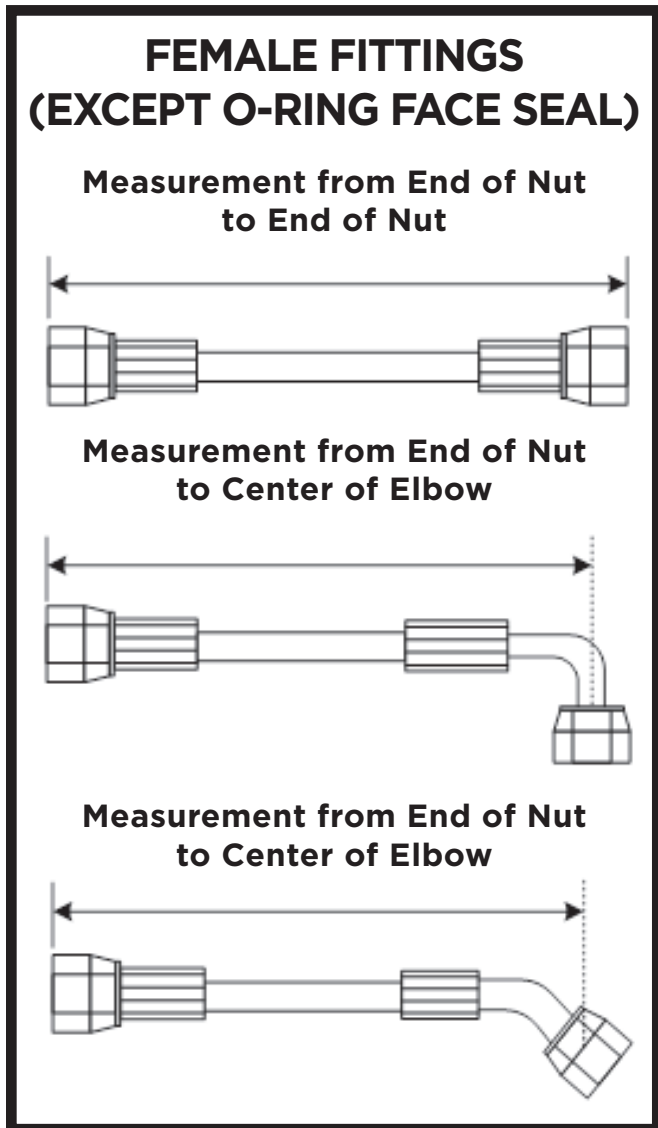

ASSEMBLY LENGTH TOLERANCES

Overall Assembly Length	Tolerance
Under 12"	+/- 1/8"
12" - 36"	+/- 1/4"
Over 36"	+/- 1%

DUAL-ELBOW FITTING ORIENTATION ANGLE

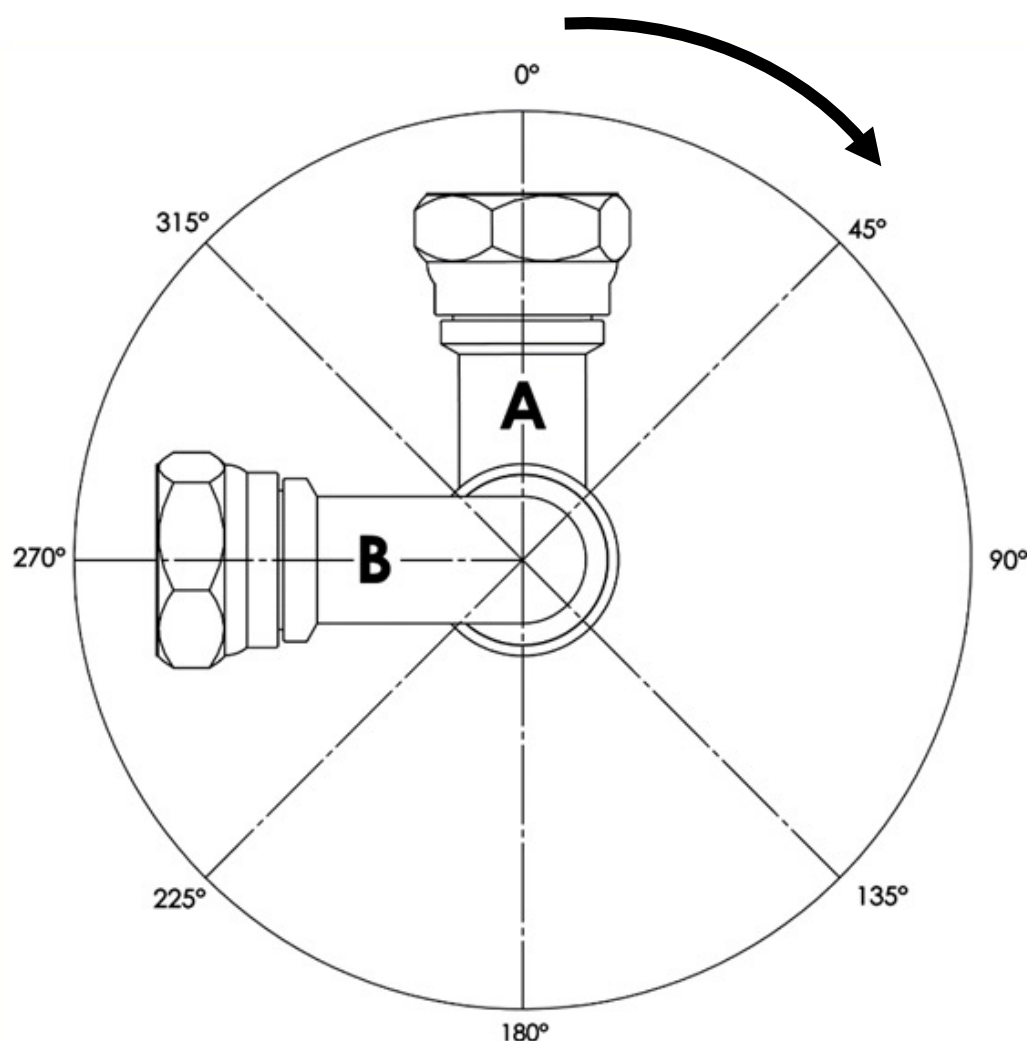

When measuring fitting orientation angle, use the Far End method. Hold the far end fitting (Fitting A) at 0° and orient Fitting B to the desired angle (angles are measured clockwise).

The example shown on the left has an orientation angle of 270°.