



# MUNCIE START<sup>®</sup>


## INSTALLATION INSTRUCTIONS

“6” or “7” PTO Special Feature/FR6Q Series PTO

“DS” or “RS” PTO Shift Type/F22 Series PTO

“GS”, “DS”, or “RS” PTO Shift Type/F20 Series PTO

**Kit Contents** - This kit includes the Muncie Start module and wiring harness adapter. The adapter will need to be installed onto main wiring harness included with PTO. The supplied adapter features 4-pin connectors to streamline this process. The module must be installed in the cab or under the hood in a protected area.

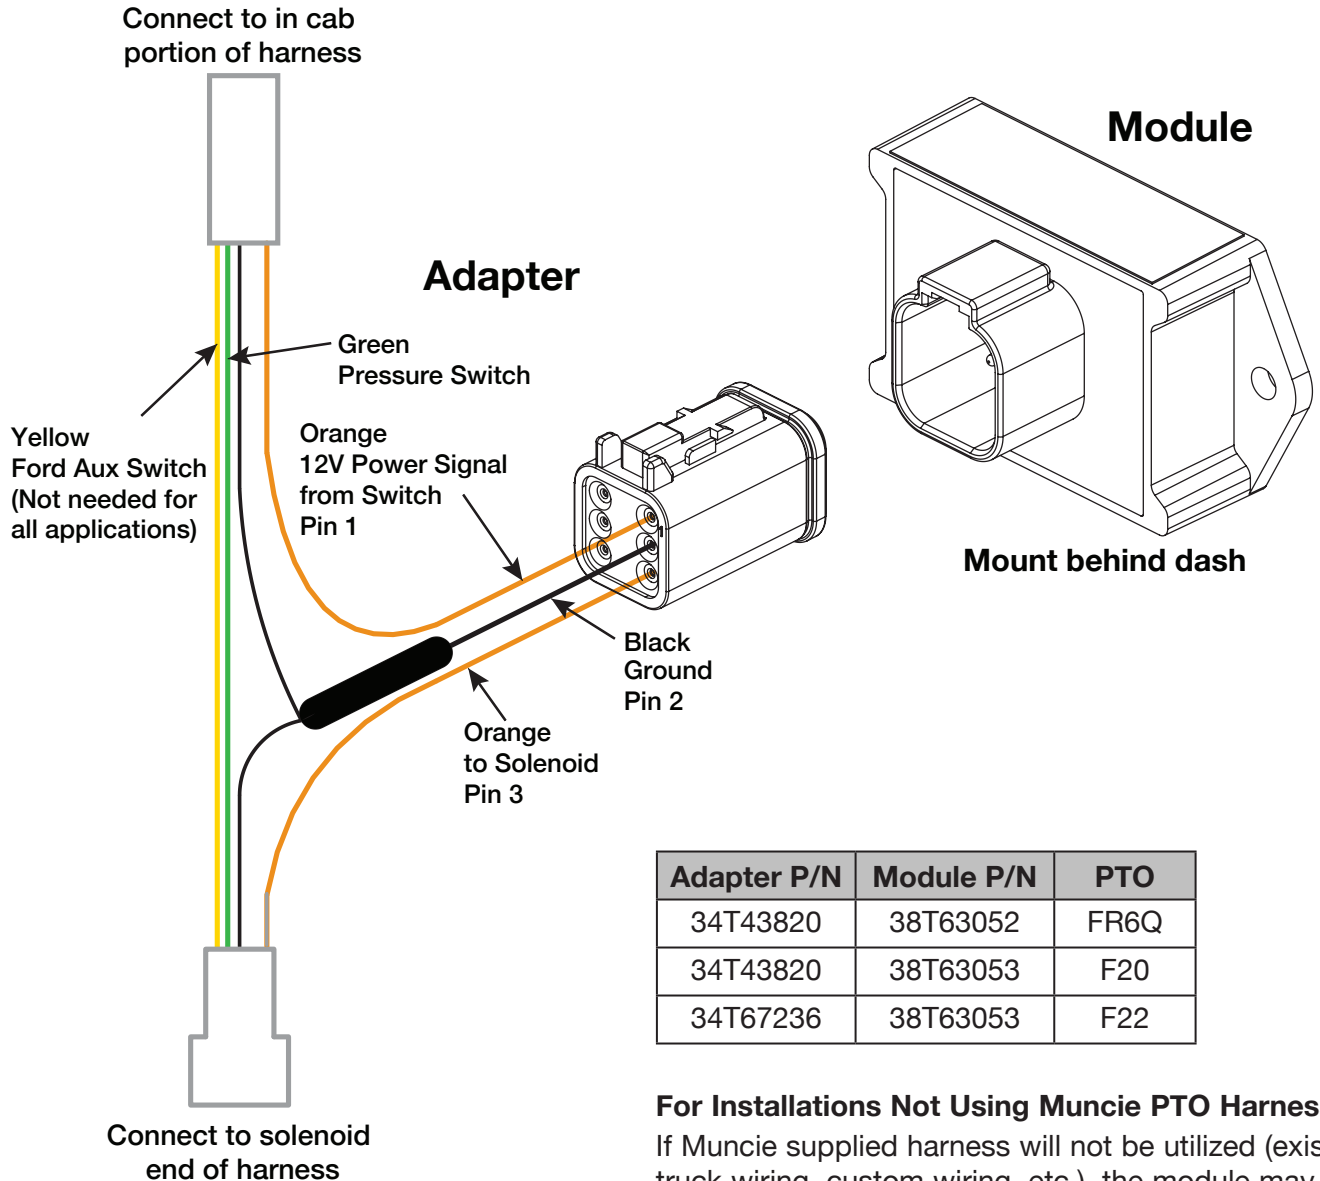

Adapter P/N	Module P/N	PTO
34T43820	38T63052	FR6Q
34T43820	38T63053	F20
34T67236	38T63053	F22

### For Installations Not Using Muncie PTO Harness

If Muncie supplied harness will not be utilized (existing truck wiring, custom wiring, etc.), the module may be spliced into PTO activation circuit. Polarity is critical for module functionality. Use diagram above to make proper connections.



A Member of the Interpump Group

IN17-14 (Rev. 10-23)

201 East Jackson Street • Muncie, Indiana 47305  
 800-367-7867 • Fax 765-284-6991 • info@munciepower.com • www.munciepower.com  
 Specifications are subject to change without notice. Visit www.munciepower.com  
 for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2017)



# MUNCIE START®


## INSTRUCCIONES DE INSTALACIÓN

TDF "6" o "7" con características especiales/TDF serie FR6Q

TDF con tipo de eje "DS" o "RS"/TDF serie F22

TDF con tipo de eje "GS", "DS" o "RS"/TDF serie F20

**Contenido del kit:** Este kit incluye el módulo Muncie Start y el adaptador de arnés de cableado. El adaptador deberá instalarse en el arnés de cableado principal incluido con la TDF. El adaptador suministrado tiene conectores de 4 pasadores para simplificar este proceso. El módulo debe instalarse en la cabina o debajo del capó en un área protegida.

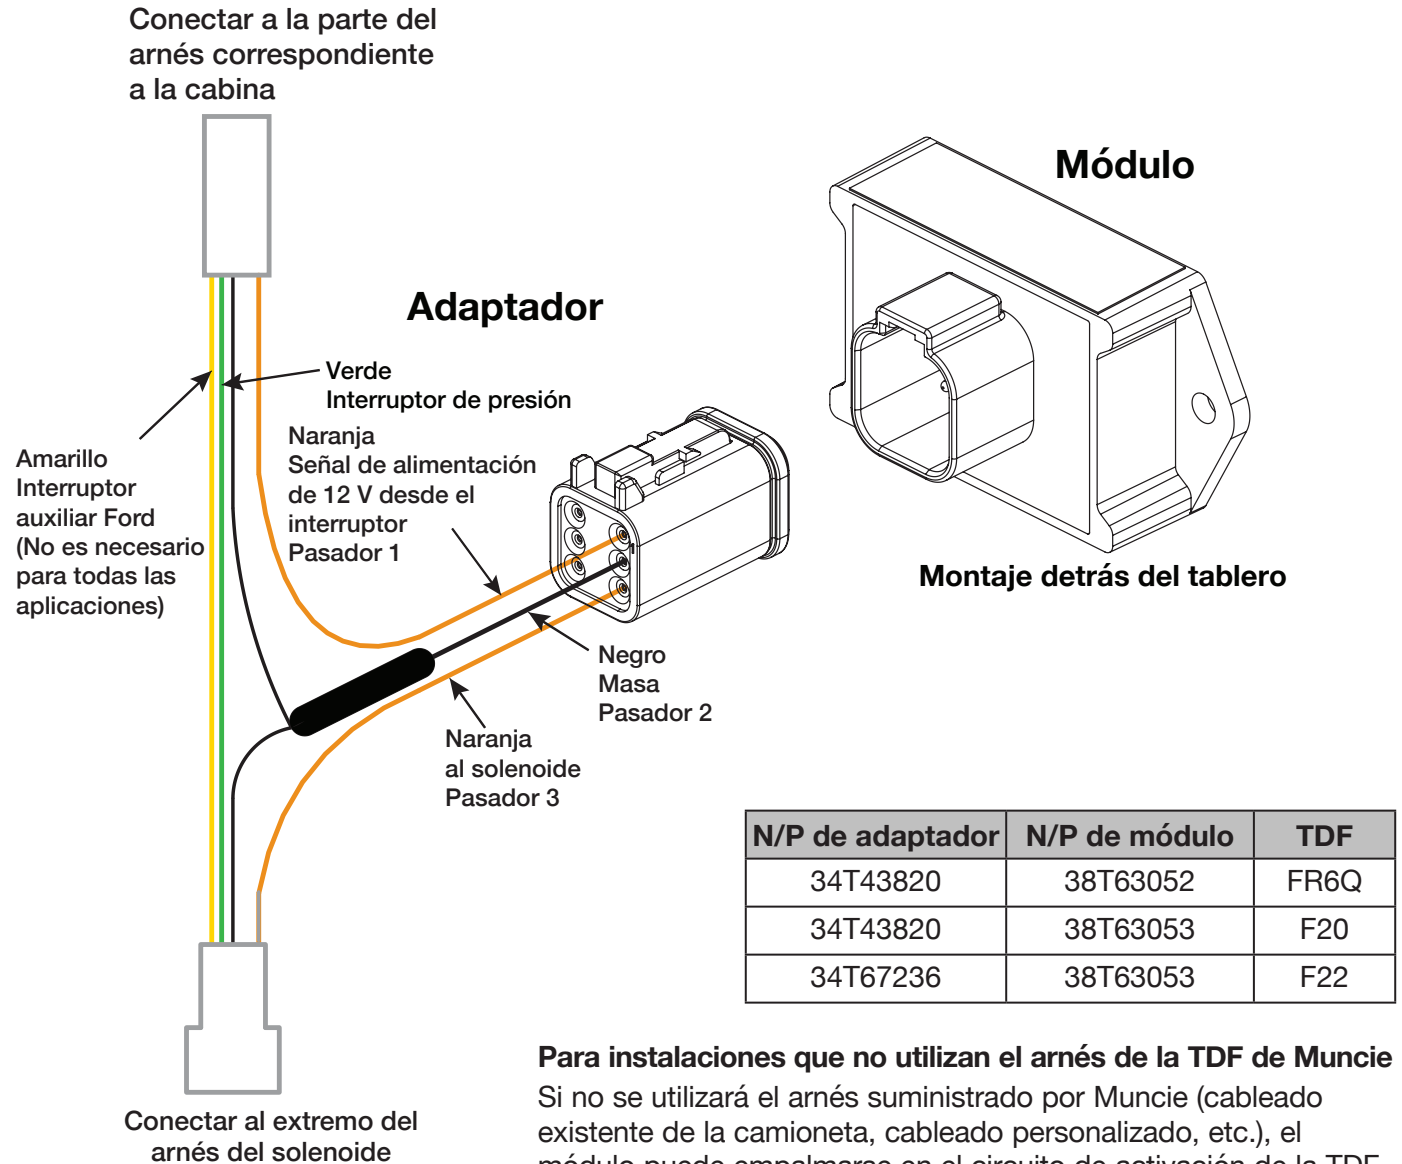

N/P de adaptador	N/P de módulo	TDF
34T43820	38T63052	FR6Q
34T43820	38T63053	F20
34T67236	38T63053	F22

### Para instalaciones que no utilizan el arnés de la TDF de Muncie

Si no se utilizará el arnés suministrado por Muncie (cableado existente de la camioneta, cableado personalizado, etc.), el módulo puede empalmarse en el circuito de activación de la TDF. La polaridad es crítica para la funcionalidad del módulo. Utilice el diagrama anterior para hacer las conexiones adecuadas.