




# TRUGREEN PTO

## INSTALLATION WIRING INSTRUCTIONS

Model 2008-0143A

### 2008 FUSO chassis connections for Engine Advance and PTO operation.

These lettered connections are to be made under the dash and to the left of the steering column.

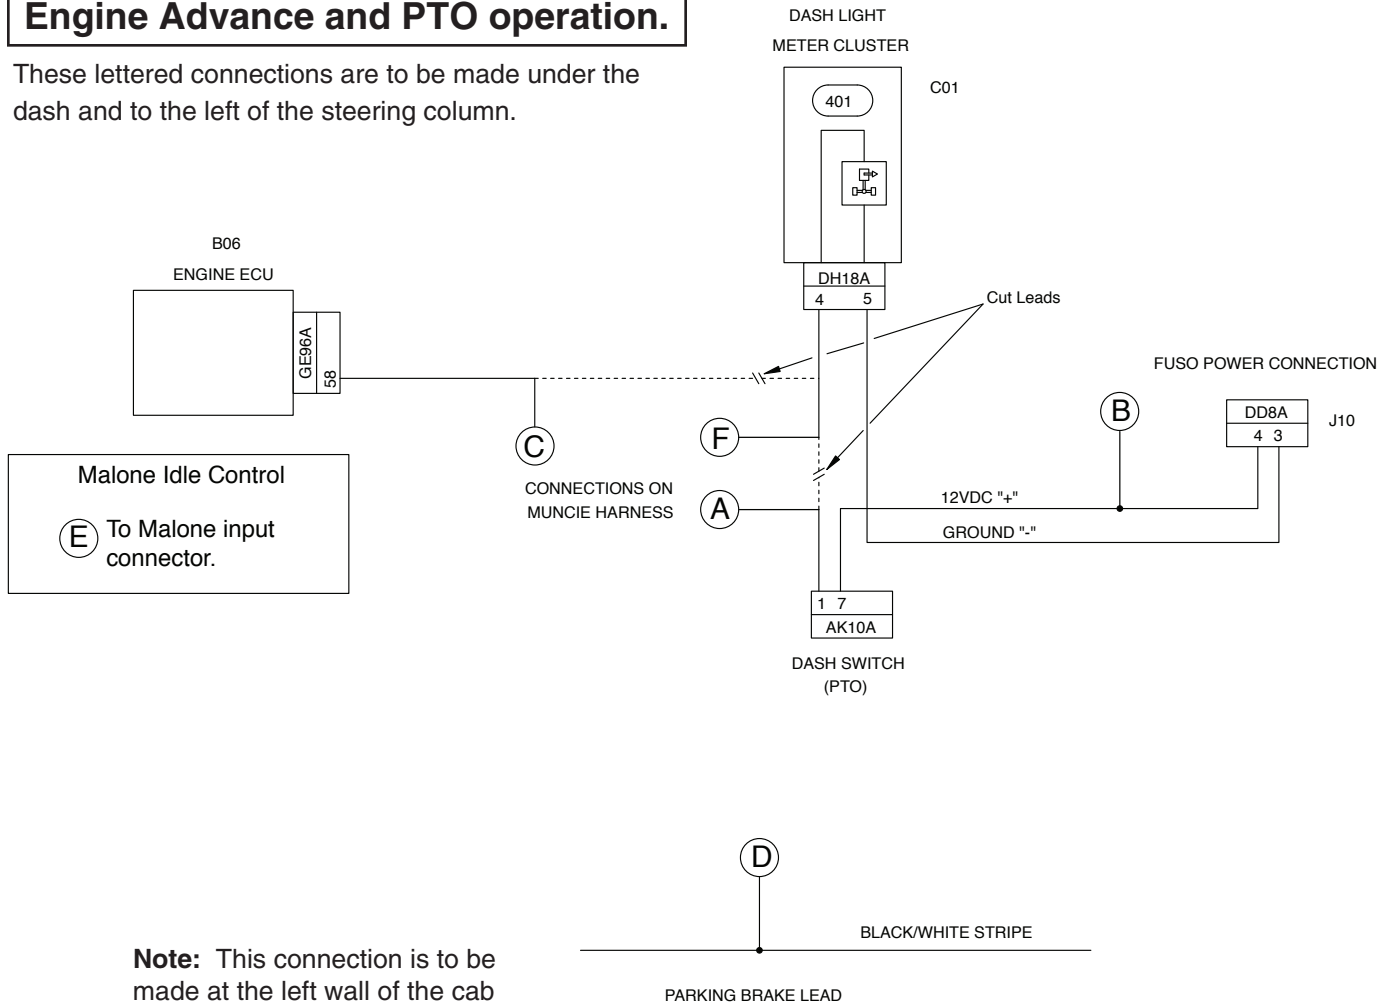

**Note:** This connection is to be made at the left wall of the cab along the floor between the door and the firewall. The floor mat will need to be pulled back to gain access to the wire.

**PTO HARNESS - SEE OTHER SIDE**



IN08-09 (Rev. 12-09) Printed in the U.S.A.  
© Muncie Power Products, Inc. 2008

**Muncie Power Products, Inc.** Member of the Interpump Hydraulics Group  
General Offices and Distribution Center • P.O. Box 548 • Muncie, IN 47308-0548  
(765) 284-7721 • FAX (765) 284-6991 • E-mail info@munciepower.com  
Web site <http://www.munciepower.com>


Drive Products, Exclusive Agents for Canada, ISO Certified by an Accredited Registrar





# TRUGREEN PTO — INSTALLATION WIRING INSTRUCTIONS

PTO Wiring Harness Part No.: 34T41265

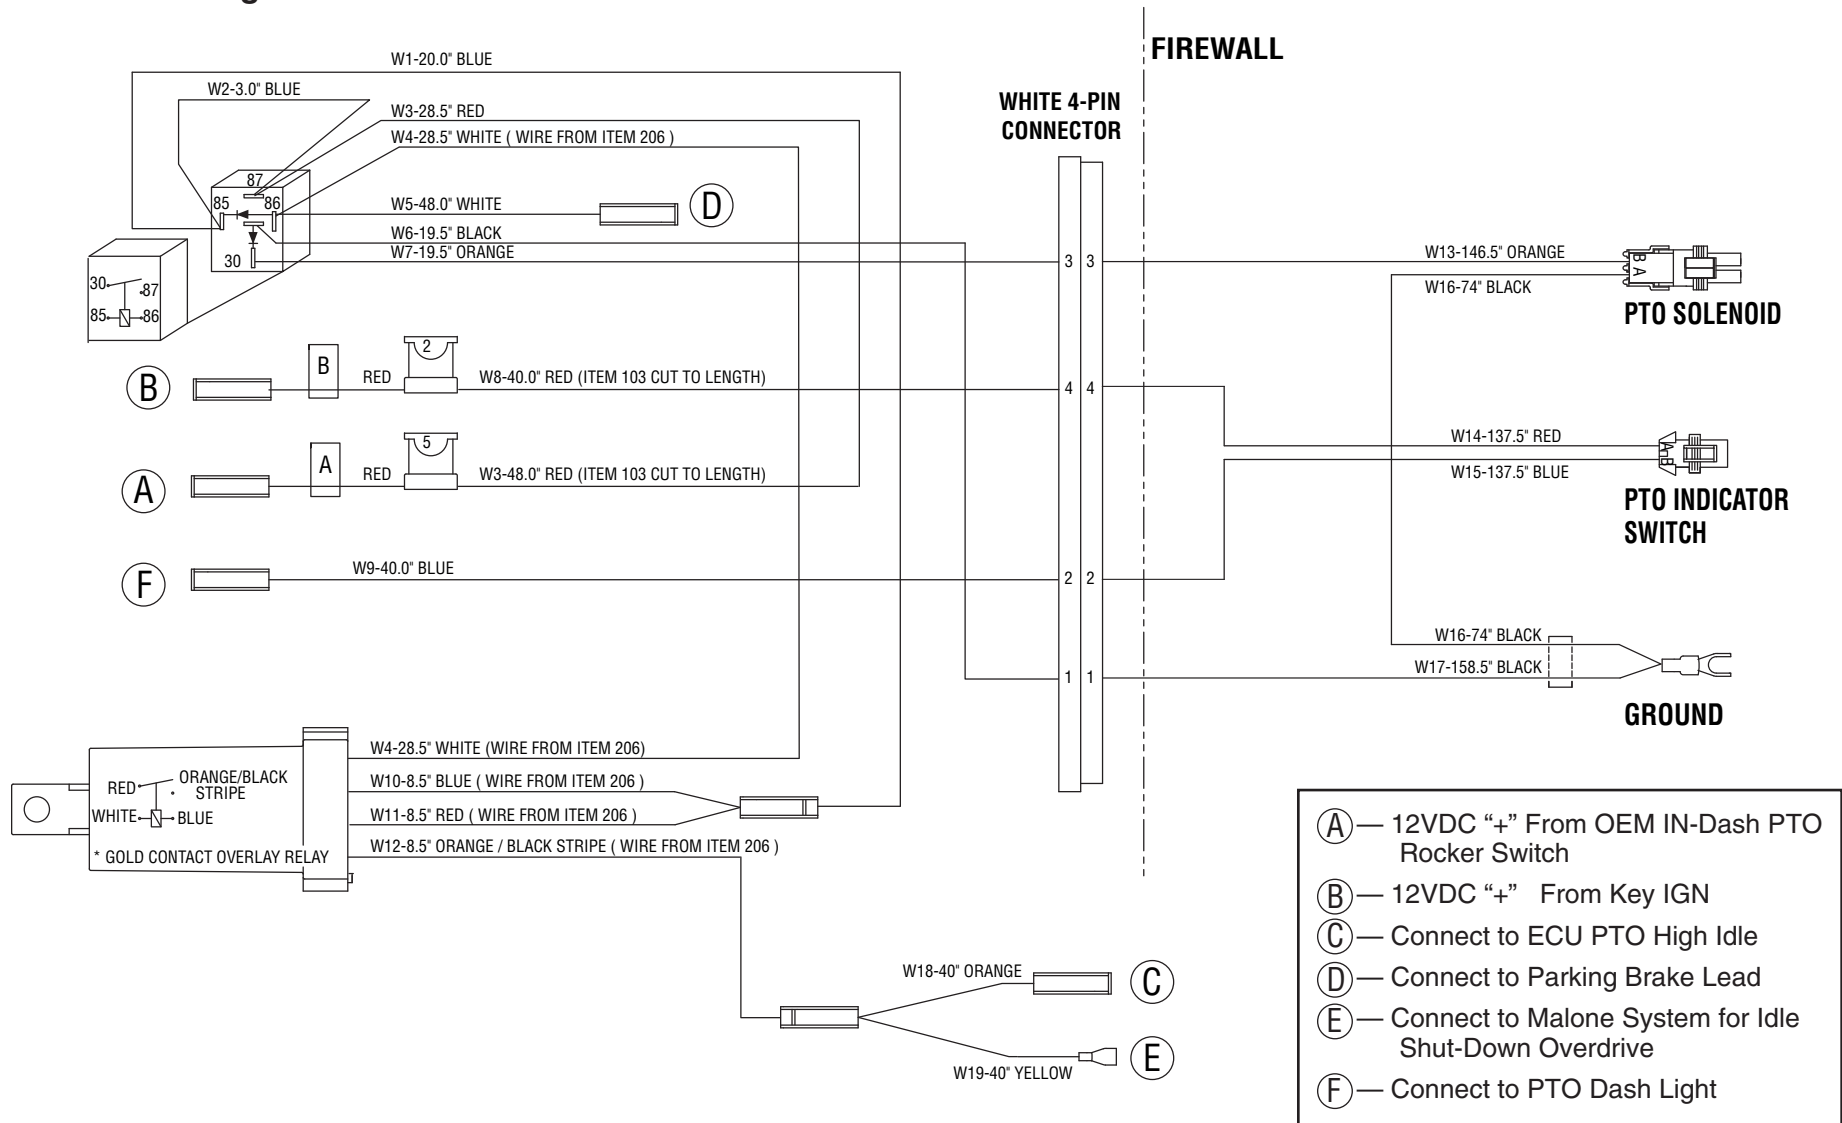

- (A) — 12VDC "+" From OEM IN-Dash PTO Rocker Switch
- (B) — 12VDC "+" From Key IGN
- (C) — Connect to ECU PTO High Idle
- (D) — Connect to Parking Brake Lead
- (E) — Connect to Malone System for Idle Shut-Down Overdrive
- (F) — Connect to PTO Dash Light