




# HIGH PRESSURE INSTALLATION KIT FOR AUTOMATIC TRANSMISSIONS

**PART NUMBER: 131-2-0001**

TO TRANSMISSION  
MAIN PRESSURE PORT "P"

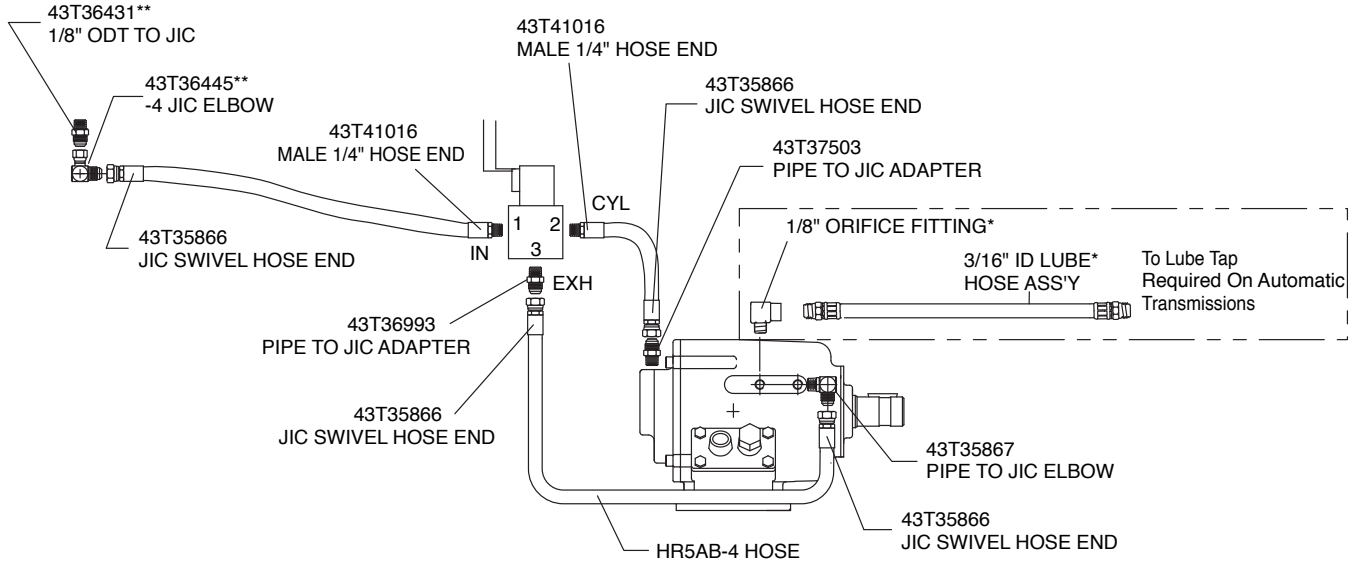

\*SUPPLIED WITH PTO SPECIAL FEATURE OPTION "P" PRESSURE LUBE  
\*\*ORDERED SEPARATELY FOR ALLISON TRANSMISSION AS SHOWN ON APPLICATION PAGE ALLI-9

## HIGH PRESSURE INSTALLATION KIT: P.N. 131-2-0001

*For Automatic Transmissions*

QTY.	PART NUMBER	DESCRIPTION
15 FT.	HR5AB-4	Hose - 1/4"
2	43T37503	Male pipe to Male JIC Adaptor 1/8" x 1/4"
2	43T41016	Reuseable Male Pipe 1/4"
4	43T35866	Female JIC Swivel 1/4"
1	43T36993	Male Pipe to Male JIC Adaptor 1/8" x 1/4"
1	43T35867	Male Pipe to Male JIC Adaptor 1/8" x 1/4"

*For Clutch-Shift PTOs on automatic transmissions with 6-bolt openings.*

### RE-USABLE HOSE END INSTALLATION:

1. Cut hose to desired length. Cut square with fine tooth blade or cut off wheel. After cutting hose to length, clear any debris with shop air.
2. Put socket in vise and screw hose counter-clockwise into socket until it bottoms. Then back off 1/4 turn.
3. Lubricate nipple threads and inside of hose with oil. Screw nipple into socket and hose. Leave 1/32" to 1/16" clearance between nipple hex and socket.
4. Make sure hose is free of any debris.

**IMPORTANT:** Consult your vehicle body builder manual or your vehicle dealer for proper PTO installation instructions. It is necessary to tap into the transmission high pressure line to obtain minimum of 100 PSI to maximum of 300 PSI for proper PTO operation. Use caution when installing PTO electric solenoid valve which is sensitive to contamination.

