




CS40/41 10-BOLT MUNCIE START® PTO ACTIVATION Allison 3000/4000 Series Transmissions


1

For Integral Solenoid Activation (CS40) PTO Special Feature Code: 6 – Muncie Start® 12 V

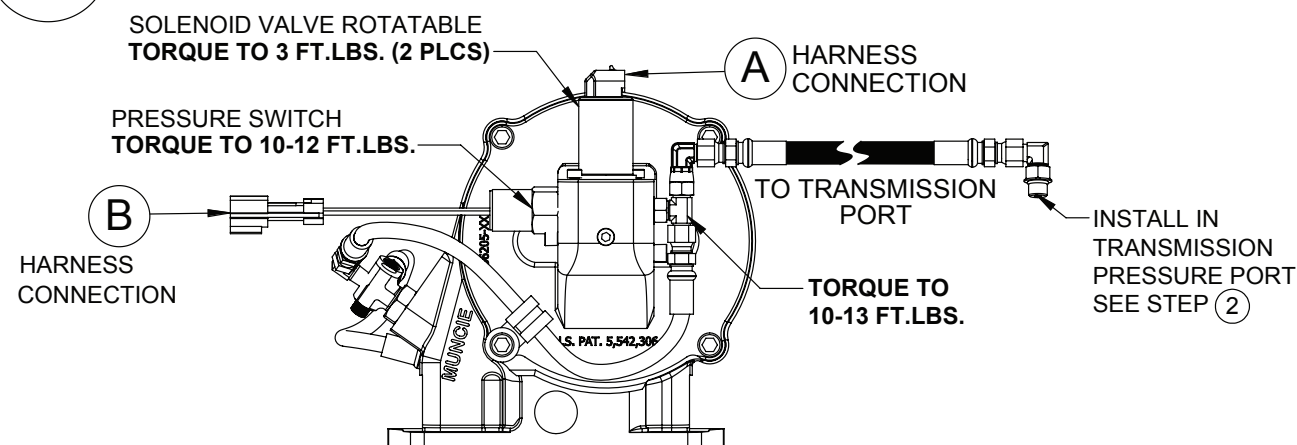

1


For Remote Solenoid Activation (CS41) PTO Special Feature Code: 6 – Muncie Start® 12 V

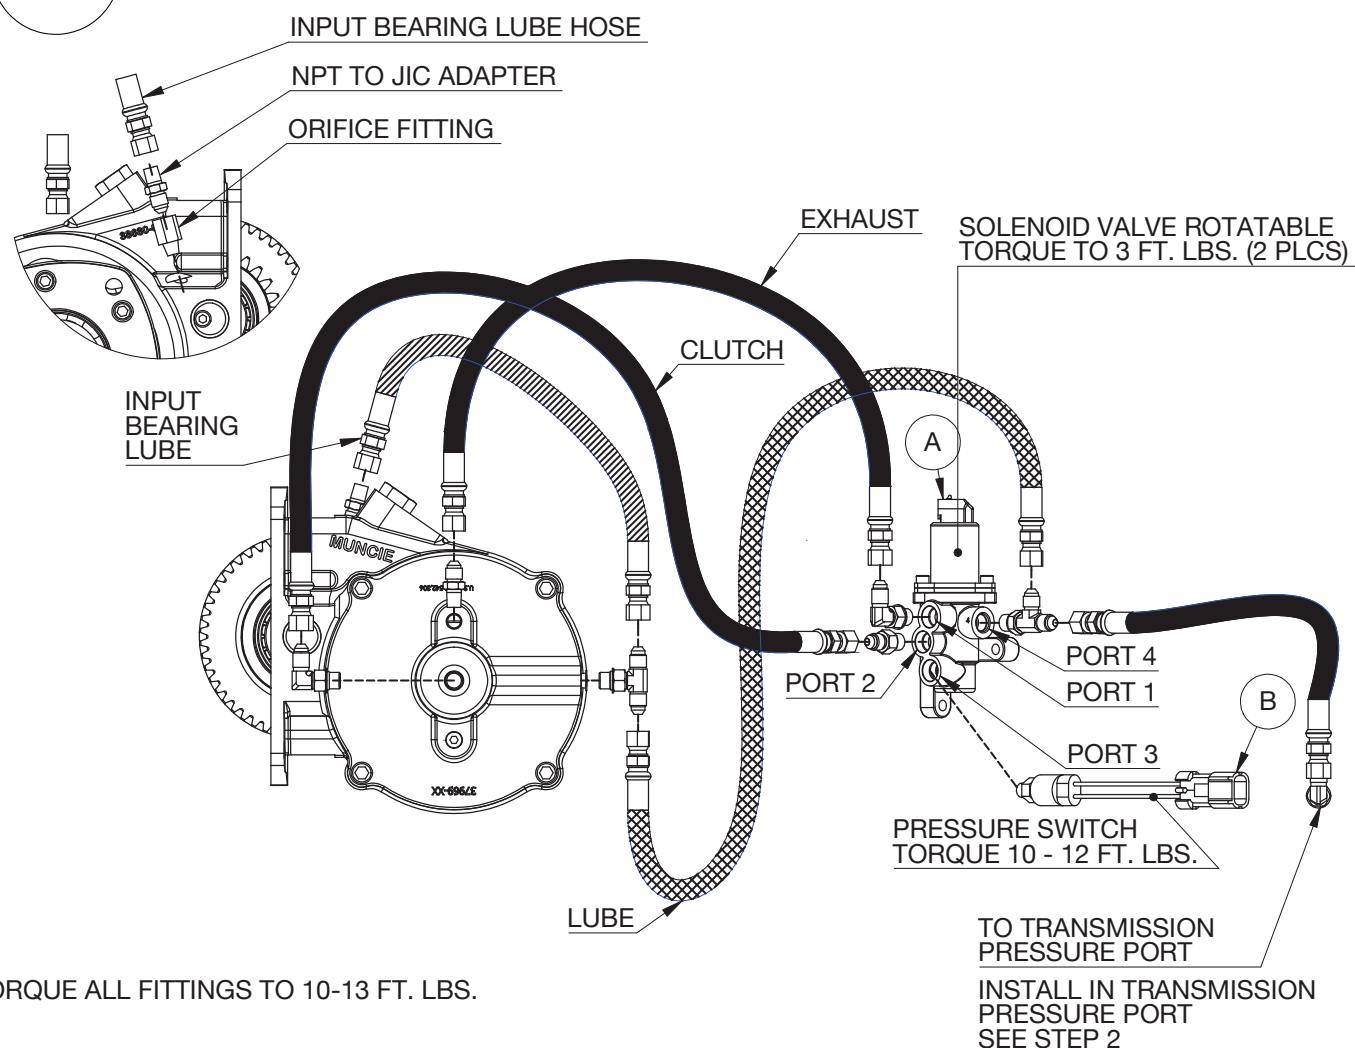


2

Transmission Pressure Port Locations


3000 SERIES

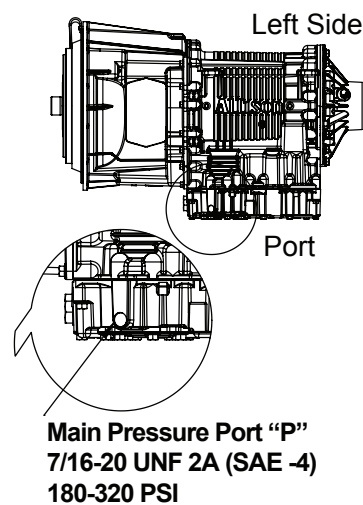

Right Side

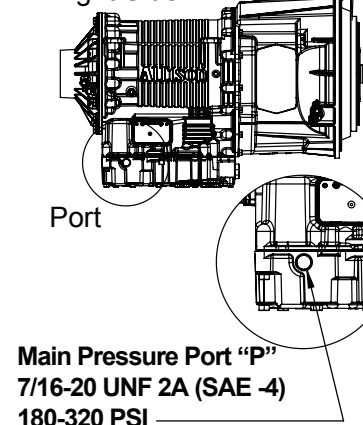


4000 SERIES

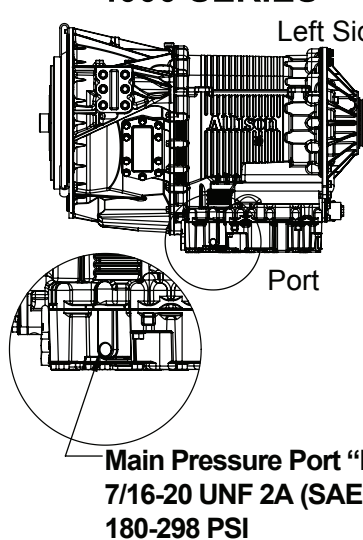

3

Wiring Harness Installation

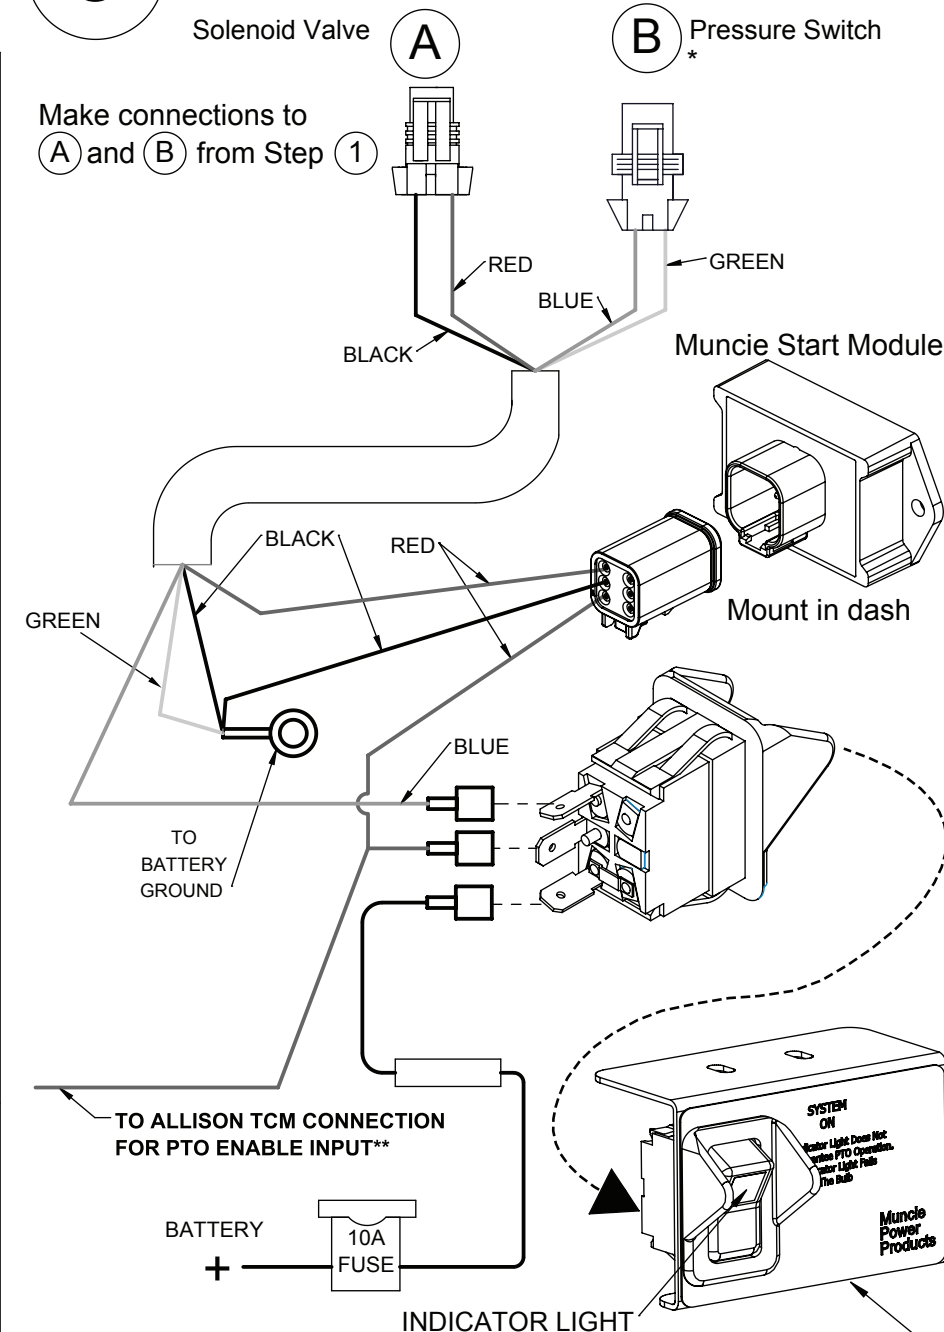

Light is to be "ON" when unit is engaged and "OFF" when unit is disengaged, and will not light up until pressure in clutch is at approximately 25 PSI or greater. Mount the activation switch in clear view of the operator. Indicator light must be installed in clear view of operator while seated in vehicle's driver seat. Use 36MK1210-A if additional warning light is needed.

*Do not install other electrical components or devices to the Muncie pressure switch or Muncie Start module.

** Clutch shift PTO requires connection to Allison "PTO Enable Input" Circuit on Allison Gen. 4 and later controls. Contact Muncie Power or Allison for more details. Check with vehicle dealer or body builder's information for location.



Muncie®
Power
Products

A Member of the Interpump Group

IN20-02 (Rev. 04-24)



201 East Jackson Street, Muncie, Indiana 47305
800-367-7867 • Fax: 765-284-6991 • info@munciepower.com

Specifications are subject to change without notice. Visit www.munciepower.com for warranties and literature. All rights reserved. © Muncie Power Products, Inc. (2020)




ACTIVACIÓN DE LA PTO DE 10 PERROS CS40/41 MUNCIE START®

Transmisiones de la Serie Allison 3000/4000

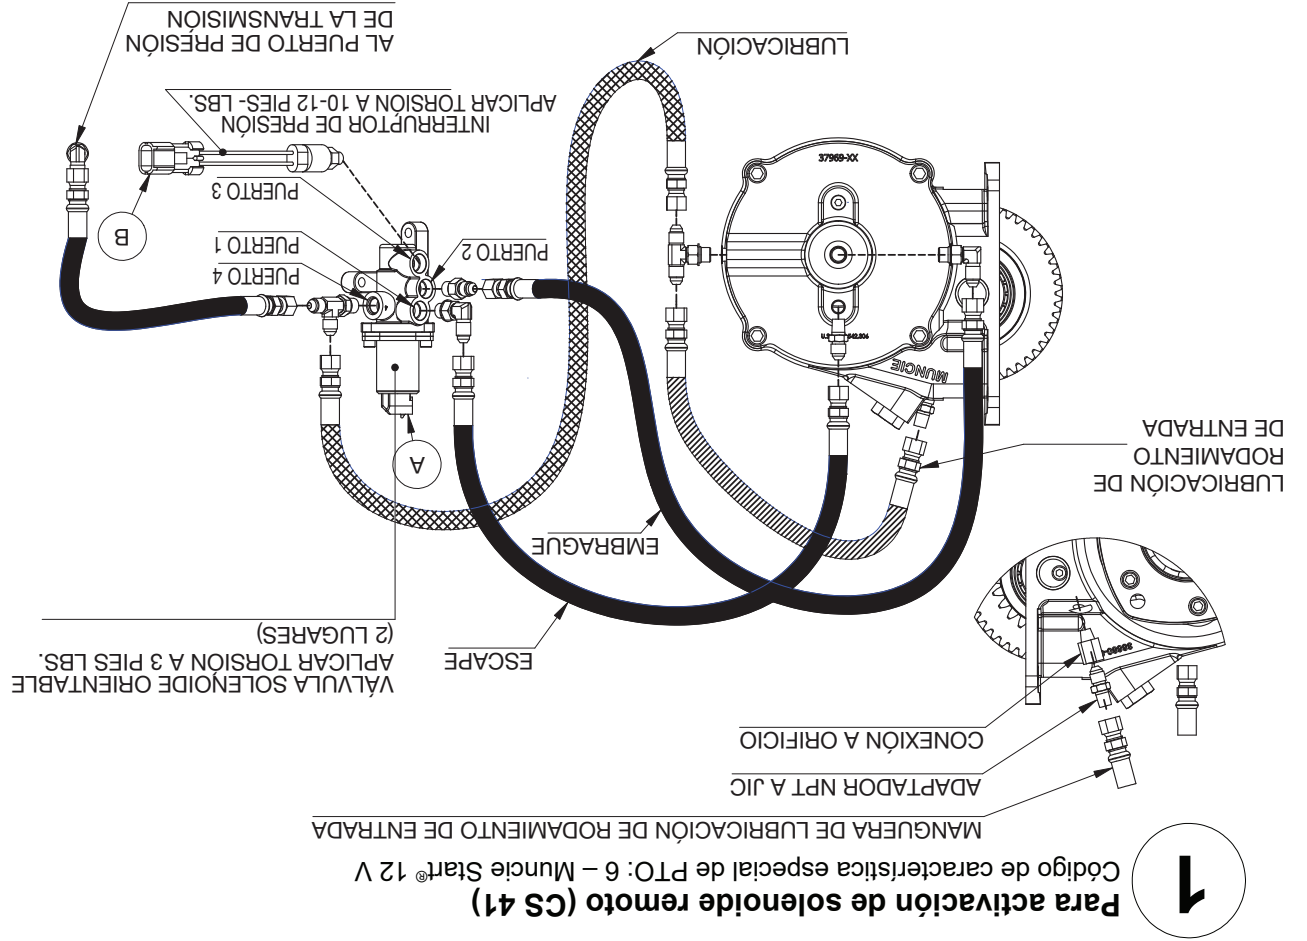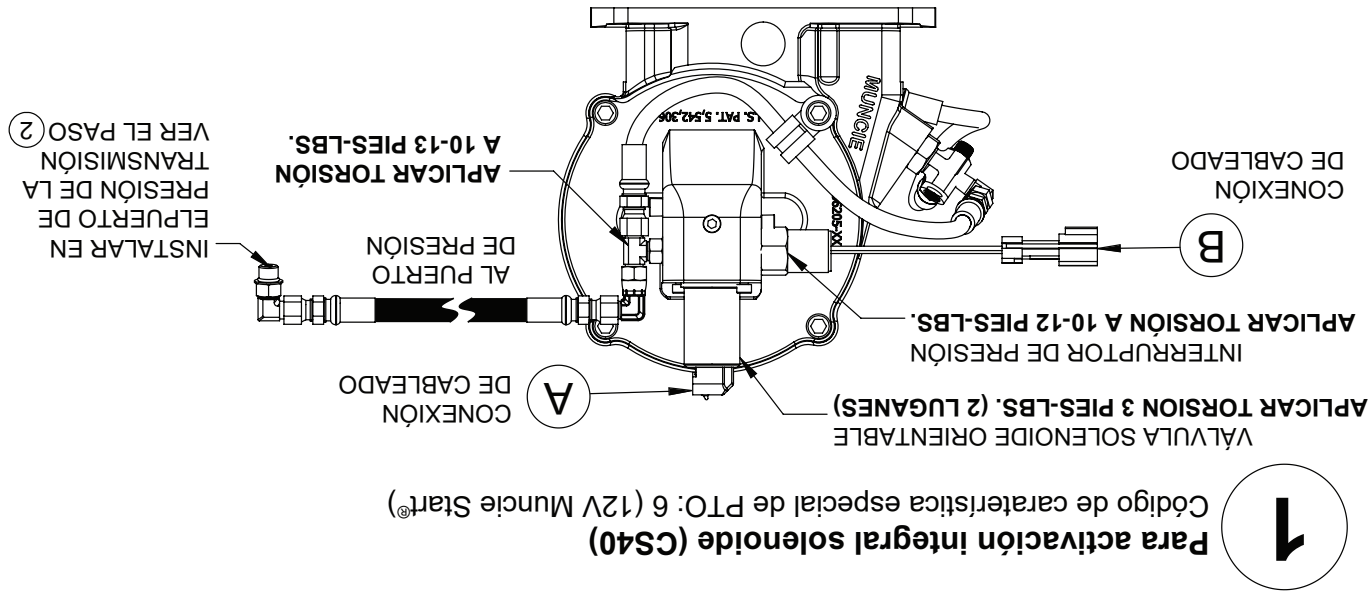

2 Ubicaciones del puerto de presión de transmisión

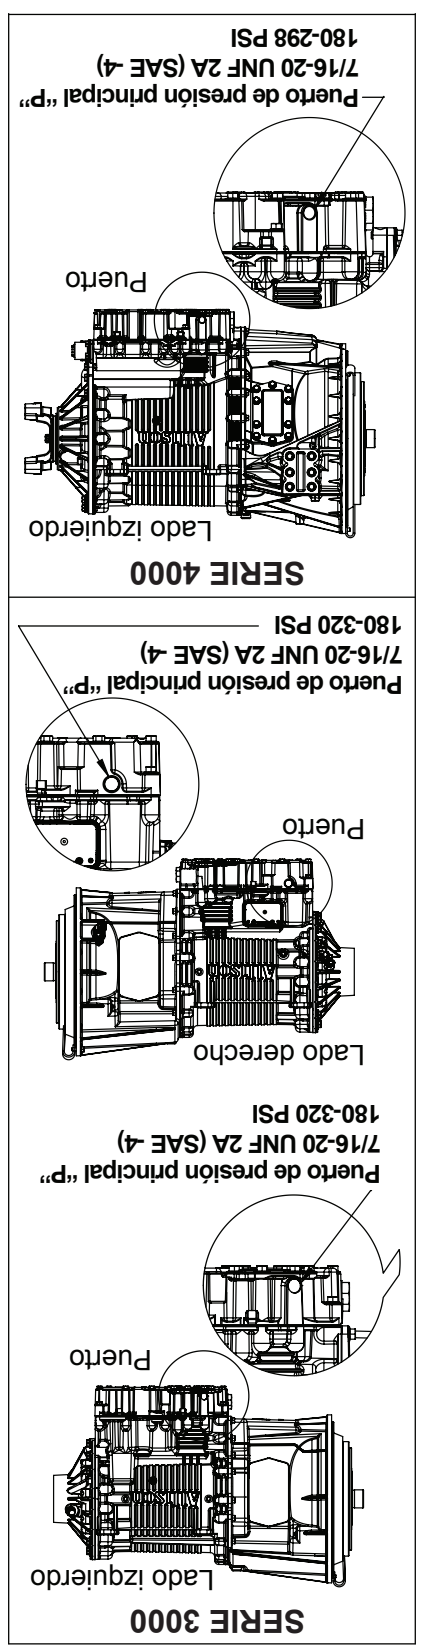

3 Instalación del arnés de cableado

