


Advantage Plus Liquid Module Connection

1. Locate the harness coming from the Liquid Enclosure.

It should contain 4 wires: 12 AWG Black; 12 AWG Red;
18 AWG Green and 18 AWG White.

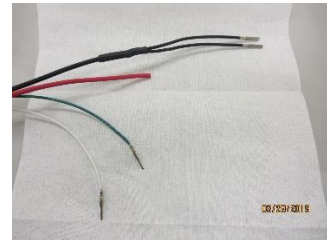

2. Route wires through the strain relief at the back of the Muncie Valve-Tank enclosure.

3. Connect the Red wire to the power stud.



4. Connect the Black wires to the grounding Terminal.



5. Push the Green wire into Pin 1 of the supplied DT04-2P connector.



6. Push the White wire into Pin 2 of the supplied DT04-2P connector.



7. Use a pair of needle nose pliers to insert the wedge lock into the DT04-2P connector.



8. Connect the DT04-2P connector to the DT06-2S connector at The back of the cabinet.

